



Energy Pro

Assembly and Operating Instructions
Differential temperature controller for solar thermal
plants for drinking water heating and heating support

These Assembly and Operating Instructions are an integral part of the product.

- > Read Assembly and Operating Instructions carefully before using the product.
- > Keep them in a safe place during the product's service life.

Translation from the German original edition ©meibes 2012 - Subject to modifications.

The contents and representations of these Assembly and Operating Instructions are the intellectual property of Meibes System-Technik GmbH.

Non-authorized disclosure, reproduction, divulgation or editing of this documentation, as well as exploitation, utilization or publication, are prohibited.

The rights to the word and design marks ›Meibes‹ and ›Energy Pro‹ are the exclusive property of Meibes System-Technik GmbH.

The rights to any cited brands, names or logos are the property of their appropriate developers / of the licensees in question.

Table of contents	Page
Important fundamental information	4
Symbols used	5
Description	6
Dimensions	7
Technical Data	8
Designation of the components	10
Operation of the controller	11
Display	12
Opening the terminal cover	13
Wall-mounting	14
Connection to power supply	15
Data interfaces	19
Hydraulic systems	20
Functions for boiler control	41
Commissioning mode	43
Automatic mode	48
Operation mode	49
Malfunction	62
Professional mode	69
Disassembly/Disposal	89
Warranty and liability	90
Error report	91
EC Declaration of conformity	93
Index	94

Important fundamental information

These instructions describe installation, commissioning, operation, repair and disassembly of the differential temperature controller **Energy Pro** for solar thermal plants.

For operation of the entire plant, the technical documentation of all the components used such as solar collectors, boiler, tank, pumps, mixers and valves etc. must be complied with.



Danger!

Assembly, connection, commissioning, repair and disassembly of the controller may only be performed by a qualified specialist!



The controller is handled by the operator of the entire solar thermal plant, i. e. as a rule by technical non-experts.



Danger!

The controller by no means replaces the safety components required under plant engineering aspects!



Make sure not to use the controller until you have thoroughly read and understood these Assembly and Operating Instructions and the safety provisions. Comply with all safety provisions and involve a specialist in case of doubt.



Important!

The fitter installing the controller must inform the plant operator about operation, functioning and the method of action of the **Energy Pro**!



Keep these Assembly and Operating Instructions and all reference documents so that they are available if required.

When relocating or when selling the device, hand the documents over to your successor.



Danger!

The device in operation may only be made accessible to adults disposing of appropriate knowledge and experience!



When handling the differential temperature controller **Energy Pro** and the entire plant, please make sure that the following safety provisions in the Assembly and Operating Instructions are complied with!



Danger!

Immediate danger for assets, life and limb!



Important!

Important information compliance with which is essential!



Note!

Useful information regarding handling of the device and the plant!



Description

The differential temperature controller **Energy Pro** is an independent electronic controller for surface-mounting which is used for the control of solar thermal plants.

The controller is equipped with a robust three-part plastic housing which can only be opened by means of tools (screw driver PH2).

Operation is effected by means of only two control elements; indications appear against a backlit colour display.

Before connection of the electrical system, the controller must be mounted firmly to a perpendicular, robust surface (wall).

For its own supply and the supply of the outputs, the controller must be connected to an electrical energy supply system in accordance with the technical data.



Note!



The electrical equipment of the device must be installed firmly and connected to the power supply via a disconnector ensuring complete isolation from the power supply according to the erection regulations!

Assembly, connection, commissioning, repair and disassembly of the controller are only admissible in a specialist workshop.

To ensure correct operation, temperature sensors type Pt 1000 must be used - the sensor design does not affect function.

Each temperature sensor has two connectors which are equivalent, i. e. interchangeable. Thus, polarity reversal is not an issue.

The sensor lines can be extended up to a length of 100 m, to this effect, a cable cross section of $2 \times 1.5 \text{ mm}^2$ is recommended.




Important!



Make sure that only a dry or slightly moistened cloth is used for cleaning and servicing of the housing, the control elements and the display.

The surfaces must never get into contact with cleaning products or solvents - mat, brittle or slightly dissolved plastic parts must be replaced immediately!

A device with damaged housing must not be operated!

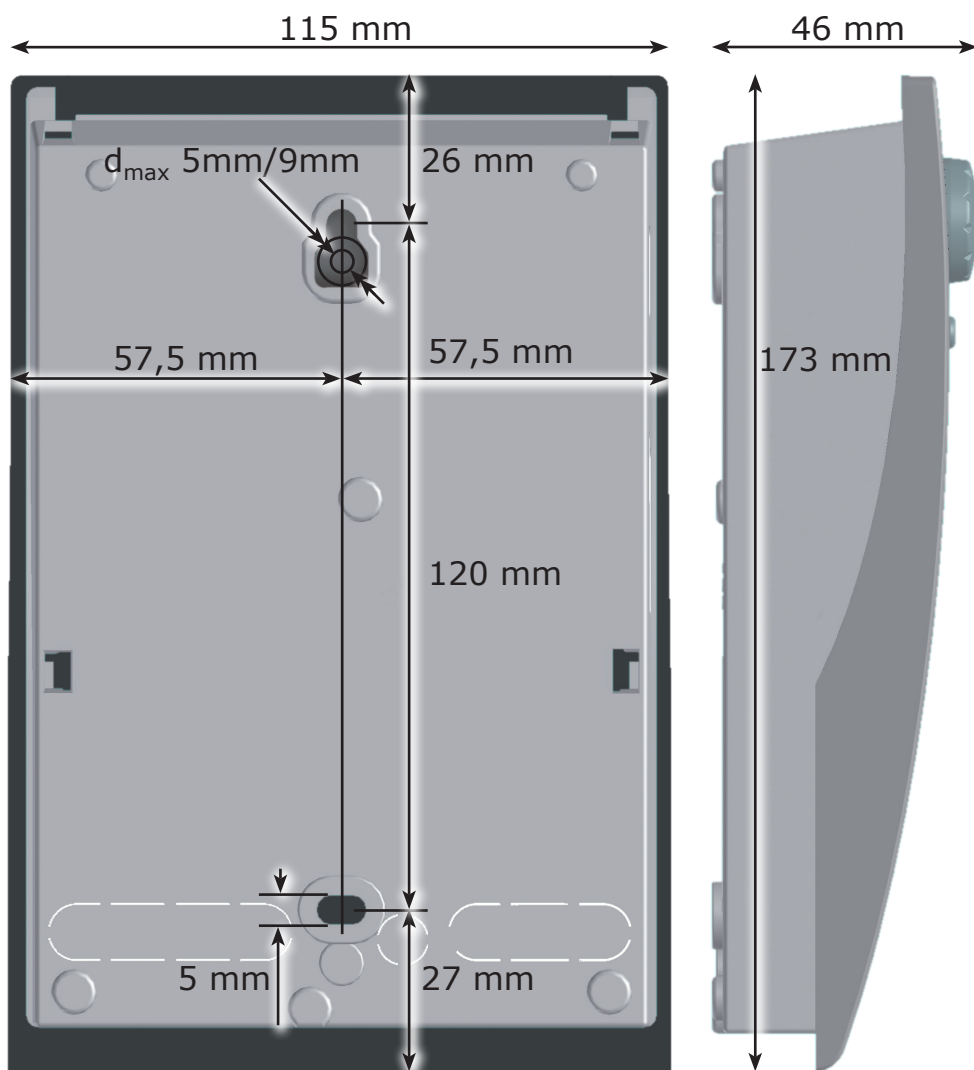

Intended Use

The differential temperature controller may be used exclusively as controller for the control of solar thermal plants. It must be operated within the scope of all the specifications described. Installation and set-up of the controller may only be performed by specialists. The fitter must have read and understood the operating manual. The fitter explains all the relevant functions to the operator. For operation, it is essential that the housing is closed and free of damage.

Scope of supplies

1 Differential temperature controller **Energy Pro**

1 Instruction manual

Differential temperature controller Energy Pro

Type of mounting	Wall-mounting
Housing	Plastics, in several parts
Mode of operation	Type 1
Type of protection	IP 20
Dimensions Width x Height x Depth [mm]	115 x 173 x 46
Weight [g] Basic version	370
Storage/operating temperature [°C]	0-40, non-condensation
Handling	via rotary encoder and pushbuttons
Display	TFT colour display 47 x 35 mm, backlit

Connection to power supply

Design	3 spring-type terminals PE, N and L
Service voltage [VAC]	230 ±10%
Line frequency [Hz]	50 ±1%
Auxiliary consumption typ. [W]	1,74
Power consumption max. [W]	3.5
Fuse	Micro fuse, type 5 x 20 mm, T2A/250 V
Rated pulse voltage [V]	2500

Max. cross sections to be connected

Cable end sleeve:	0.25 to 0.75 mm ²
Single-wire	0.50 to 1.50 mm ²
Fine-wired	0.75 to 1.50 mm ²

Interfaces TS1 / TS2 / TS3 / TS4

Design	2 spring-type terminals each
Assignment as inputs	
Admissible temperature probe	Temperature sensor Pt 1000
Optional assignment of TS3 / TS4 to the impeller sensor	DFZ 1-100 pulses/litre
Optional assignment as output on TS4	PWM signal 100Hz...2kHz or analogue output 0...10V, max. 10mA

Triac outputs RO1 / RO2

Design	3 spring-type terminals each, PE, N and L
Output voltage [VAC]	230 \pm 10%
Output power max. per output [VA]	200
Output current max. per output [A]	1


Switching output REL: Floating change-over contact

Design	3 spring-type terminals
Switching voltage max. [V]	253
Switching capacity max. [VA]	230
Switching current max. [A]	1

Interface for analogue Vortex flow sensors

Design	Plug connector
--------	----------------

Designation of the components

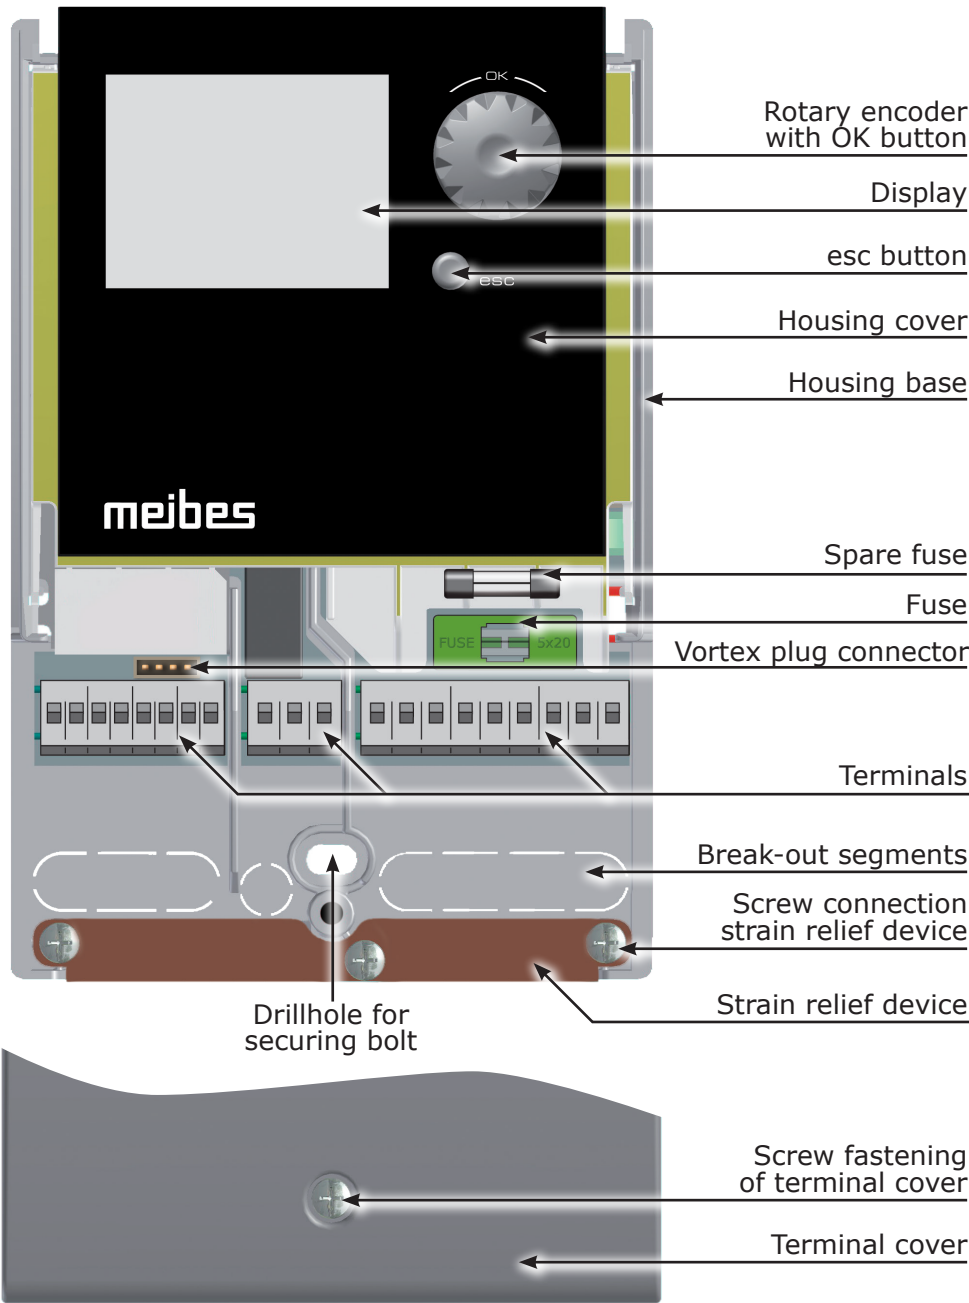


The entire set-up and operation of the differential temperature controller **Energy Pro** is effected via only two control elements on the device front.

All settings and interrogations are effected via the rotary encoder.

To find a required menu item, turn the rotary encoder to >scroll< through the menu - the selectable option appears on a coloured background on the display.

To confirm the selected menu item, press the rotary encoder. An appropriate submenu is called up, or selection is activated.

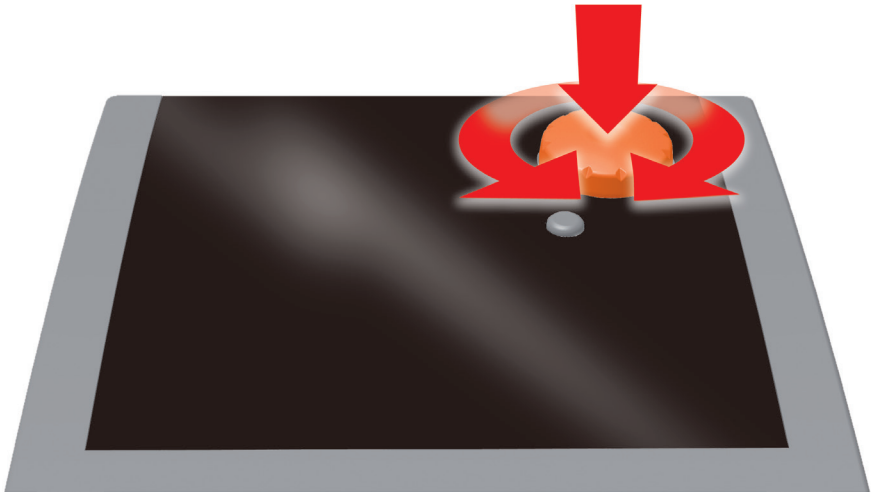

Press the esc button to make the menu return by one level from any subitem.

If no input is made within the preset time (30-255 s), the controller returns automatically to the initial level.




Display

For indication of the operating mode and for communication in case of set-up, malfunction, modification and evaluation, the differential temperature controller **Energy Pro** is equipped with a coloured full graphics display which is permanently backlit.

The display is active as long as there is supply voltage on the controller.

After a preset time (30 - 255 s), backlighting is dimmed to 10%.

System 1

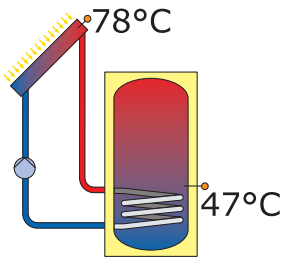

Active system
with current
temperatures

04.07.2012 10:35 ← Date and time

Display elements; example: information screen

Number and name of menu

1.3.2 Tube collector

Professional mode

Manual mode

Message

Activation

Start

n solar 1

80%

t start 10min

T start 20.0°C

Check box

Sub menu arrow

Selection menu

Activatable menu item

Scroll arrow


04.07.2012 10:35 ← Date and time

Display elements; example: communication screen



Danger!

Mortal danger due to electrocution! Whenever work is performed on the open terminal cover, all poles of the power supply must be disconnected reliably and protected against being switched on again!

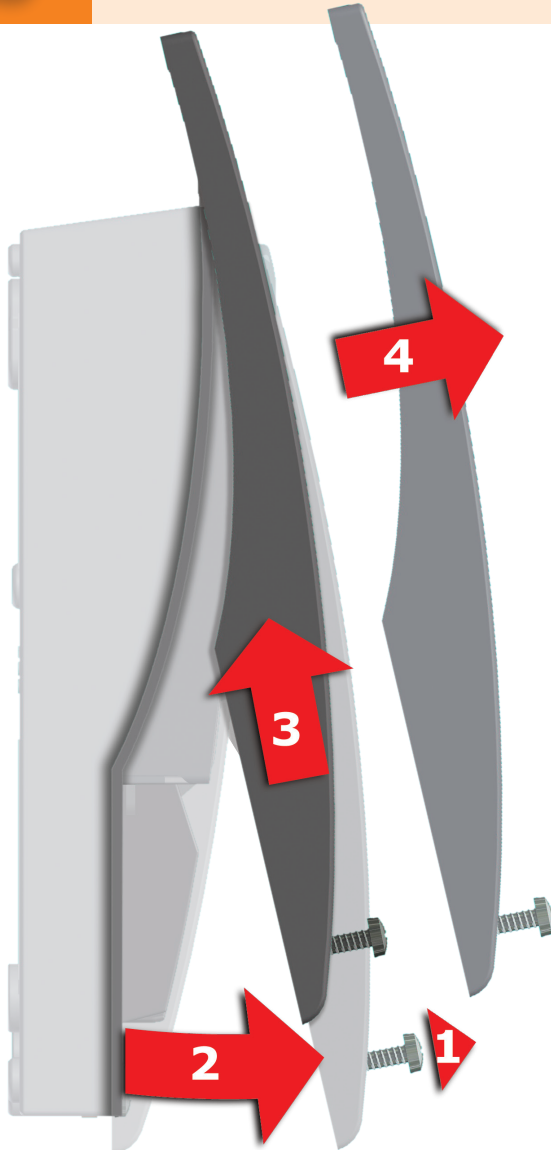

1 Release the lock screw.

2 Swing terminal cover forward ...

3 ... push it upwards ...

4 ... and remove it.

Store the terminal cover carefully and protect it against damage!


To close the terminal cover, reverse the opening procedure.

Important!

The device corresponds to protection type IP 20 - make sure the appropriate prerequisites exist on the envisaged place of installation.

Do not use the housing base as drill template.

A device with damaged housing must not be operated!

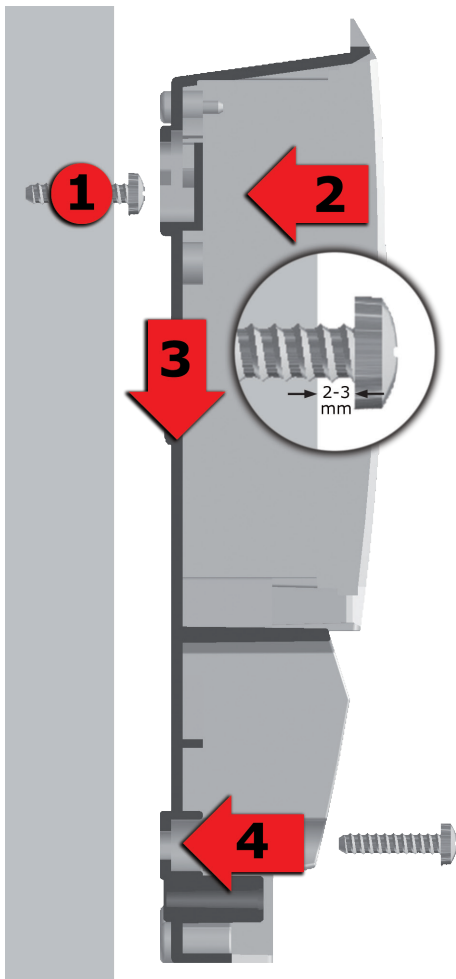

- 1** Fasten the top securing bolt so that a space of 2 to 3 mm is created between the wall and the screw head.
- 2** Move the device so that the upper fastening port is located above the screw head ...
- 3** ... and push it downwards.
- 4** Fasten the lower securing bolt.

If necessary, use dowel pins for wall-mounting!



Danger!

Mortal danger due to electrocution! Whenever work is performed on the open terminal cover, all poles of the power supply must be disconnected reliably and protected against being switched on again!



The differential temperature controller **Energy Pro** is connected to the power supply via three groups of spring-type terminals which are visible once the terminal cover is opened.


To introduce the cables, release the three screws on the strain relief device; if necessary, remove the strain relief device.

In case of flush mounting of the cables, the break-out segments in the housing base can be removed carefully and the cables routed through these ports.

The central terminal block is the interface to a potential-free change-over contact.


The spring-type terminals for the power supply, RO1, RO2 and REL, and for TS1, TS2, TS3 and TS4 can accommodate solid wires up to a cross section of 1.5 mm². Appropriate stranded wires must be preassembled with cable end sleeves.

For the strain relief device function, TS1 to TS4 and REL require cable cross sections of at least 5mm, for Power, RO1, RO2 at least 7mm.

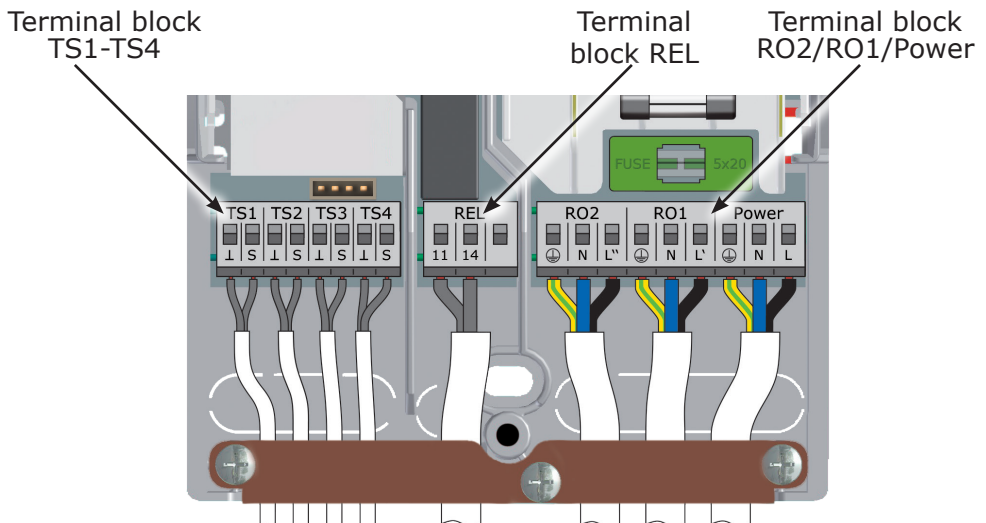


Connection of a switching valve to RO1/RO2

Connection diagram for a switching valve without power supply to RO2:

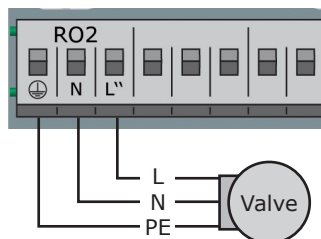


Connection diagram for a switching valve with power supply to RO2:

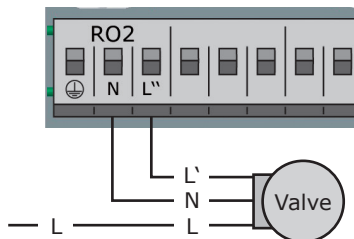


Connection of a switching valve to REL

Connection diagram for a switching valve without power supply to REL:

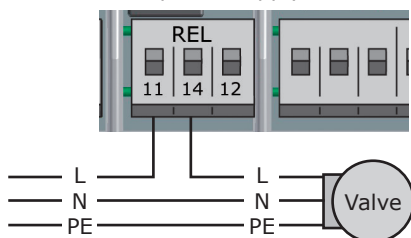


Connection diagram for a switching valve with power supply to REL:

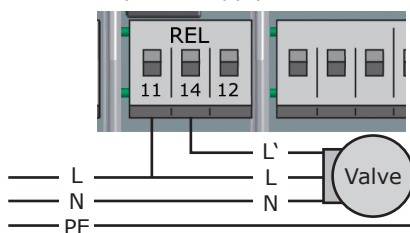

Connection of a pump to REL

Connection diagram for a pump to REL:

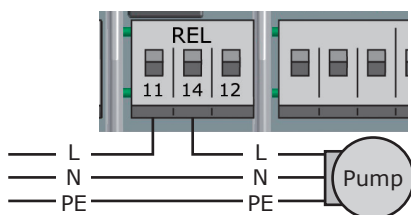


Volumetric flow sensor:

Measurement of solar radiation (heat quantity):

The solar yield is calculated from the flow rate and the differential temperature. The differential temperature is the difference in the temperature of the collector sensor and the solar circuit return line sensor. There are various technical options:

a) Use of a vortex volumetric flow sensor with 2 analog signals for flow rate and temperature. The vortex sensor can be inserted directly at the plug connector provided behind the TS3/4 terminals. All plant layouts permit solar radiation.

Pin assignment



b) Impeller sensor (incrementation input)

An impeller sensor can be connected to TS3 or TS4 and must be adjusted during installation. The temperature sensor for the solar return line must be set in the menu >1.1.4 Heat quantities<. Solar radiation measurement using an impeller sensor is possible for plant layouts 1, 2, 3, 4, 5, 7, 10, 12 and 14.


High-efficiency pump:

A high-efficiency pump can be connected via RO1 or RO2.

The appropriate control signal is issued at TS4.

Thus, TS4 is no longer available as input.

The control signal may be an analog voltage 0 - 10V or a PWM signal.

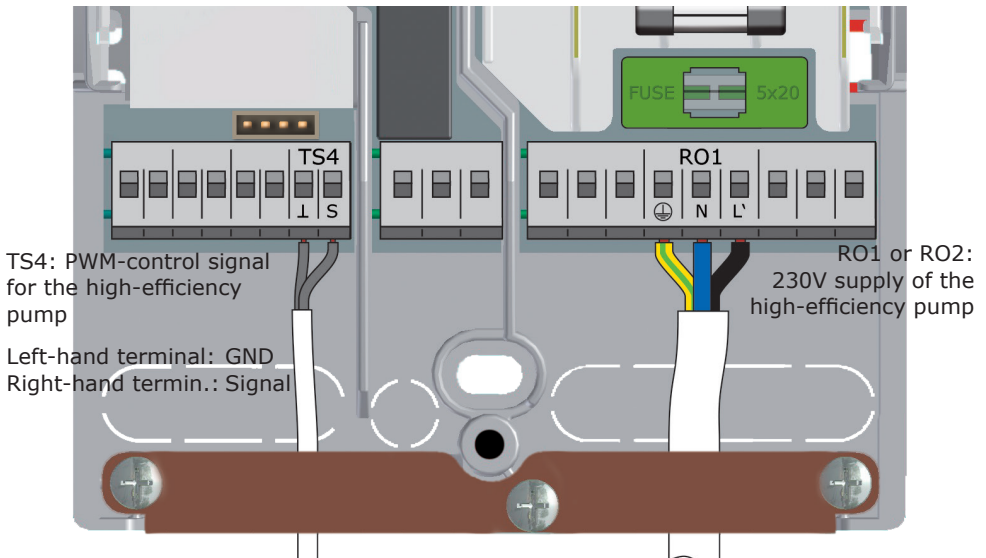



For further details, please refer to the pump specification.

For definition and settings, the professional mode under 1.2.9 has been provided.

The strain relief device can only ensure solid clamping if the cables are not stripped to a length of over 35 mm.

Insulation of the individual wires must be removed over a length of 9 - 10 mm to ensure safe electric contact in the spring-type terminal.

Stranded wires must be provided with cable end sleeves!

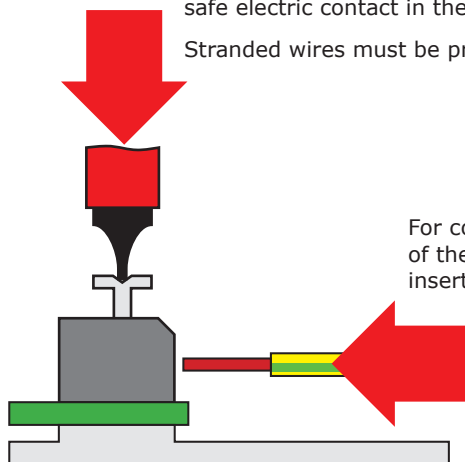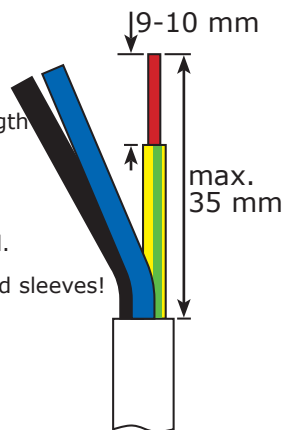


For connection, press the actuation pushbutton of the spring-type terminal using a screwdriver and insert the wire to its stop in the appropriate port.

Release the actuation pushbutton and pull the cable slightly to ensure that it is safely clamped.

Important!

Before closing the terminal cover, make sure the strain relief device is tightened safely.

Check once more that all cables are in good condition and connected correctly.

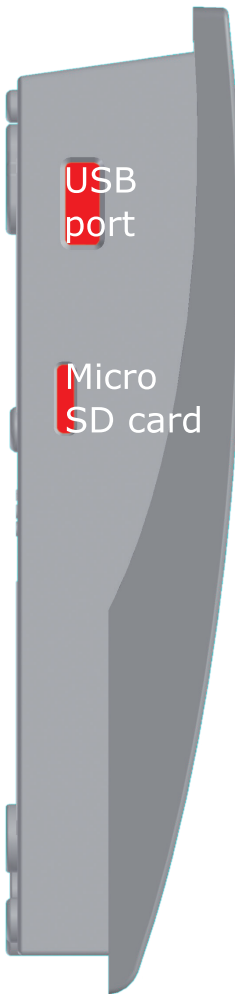

The solar controller has the following data interfaces:

The cut-outs at the left of the housing base accommodate a USB port as well as a slot for a storage medium (Micro SD card).

These interfaces are used, for example, for reading of error messages or log data or loading of software updates.

The USB port provides access to the Micro SD card.

Only SD cards approved by emz must be used.

The controller automatically detects the Micro SD card.

Prior to removing the Micro SD card

>Rem.SD card safely< must be selected in >1.2 Settings<, otherwise data loss may occur.


Note!

Define structure and design of the plant already when planning the entire solar thermal system and align the design with the one of the hydraulic systems of the controller!

If you want to complete an existing system or replace the existing controller, please make sure that

Energy Pro is compatible with the existing configuration!

The sensors are connected to TS1 to TS4, the order not being significant; pumps and valves are connected to RO1 / RO2 - The interfaces are assigned to the functions in question on commissioning.




Supply line




Return line


Heating pump




Switching valve



Hydraulic heat exchanger

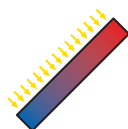

Solar collector panel
Main yield

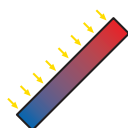

Solar collector panel
Secondary yield



Boiler, e. g. using fossil fuels/ solid fuels/ heat pump etc.



Boiler with disable recharge feature time-/temperature-controlled, in combination




Boiler with disable recharge feature, efficiency optimization


—●— Temperature probes





Swimming pool

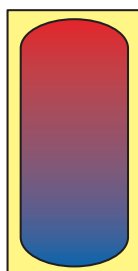



Warm water /
buffer tank without
heat exchanger


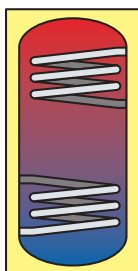


Warm water /
buffer tank with
heat exchangers

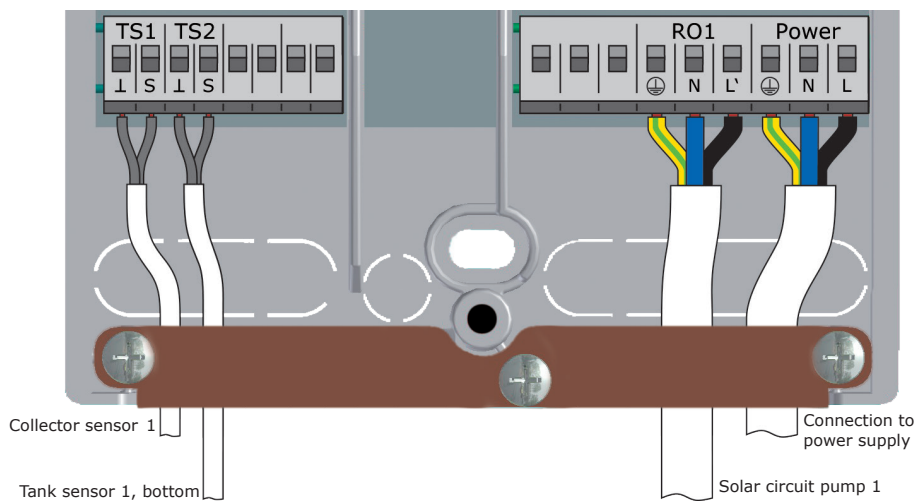
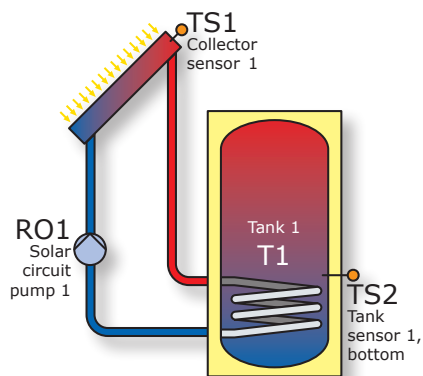




Hydraulic system 2

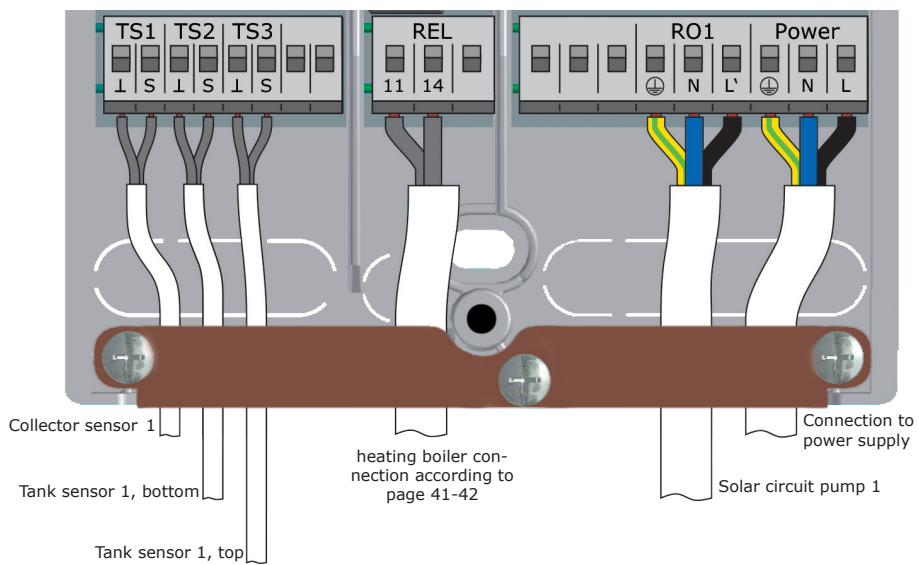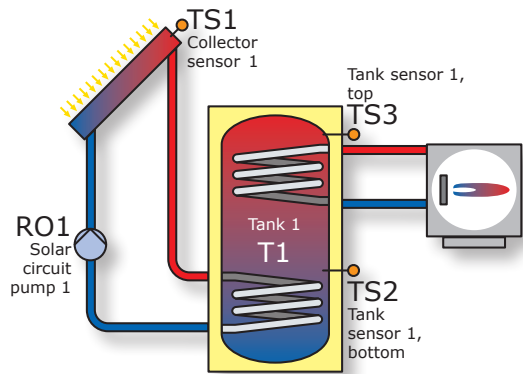

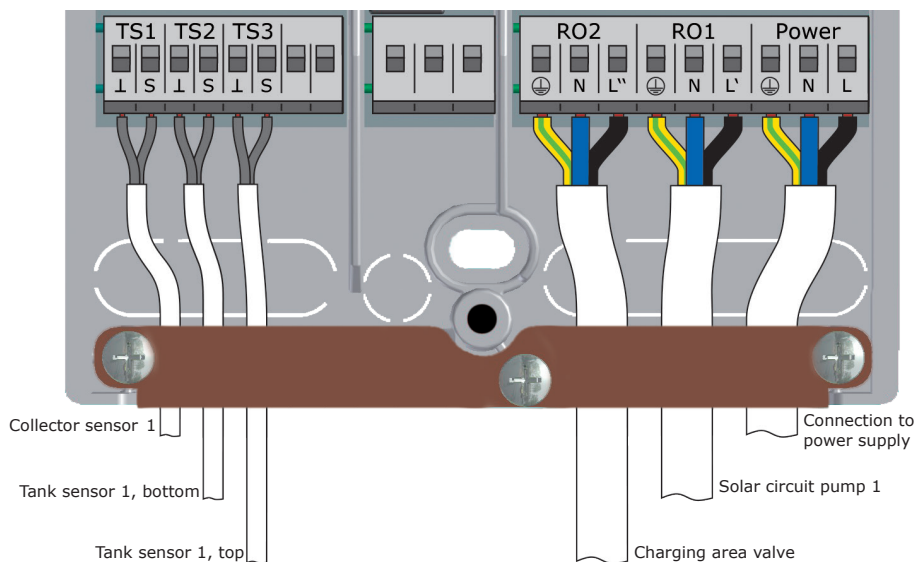
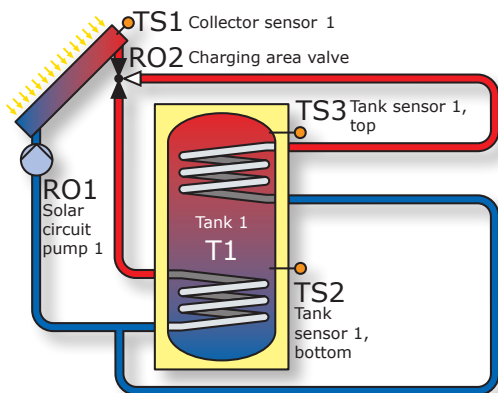




Hydraulic system 4

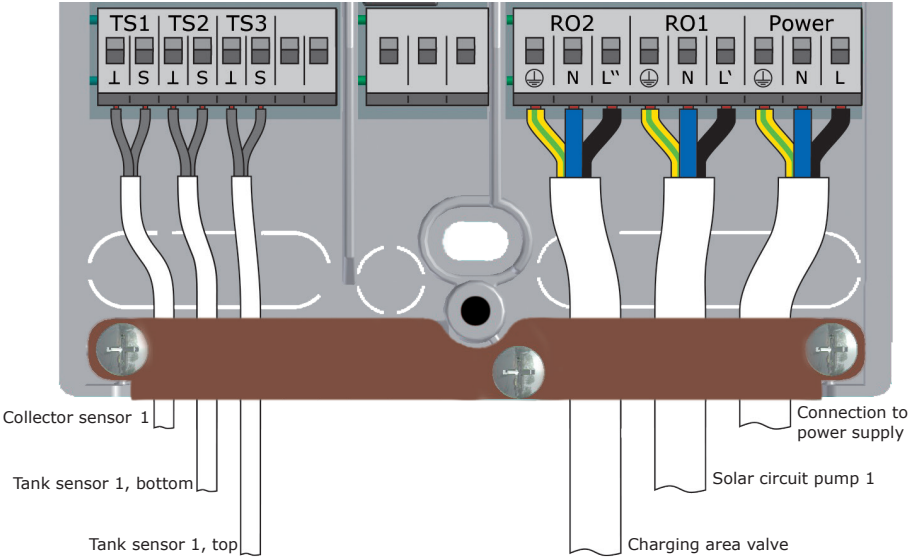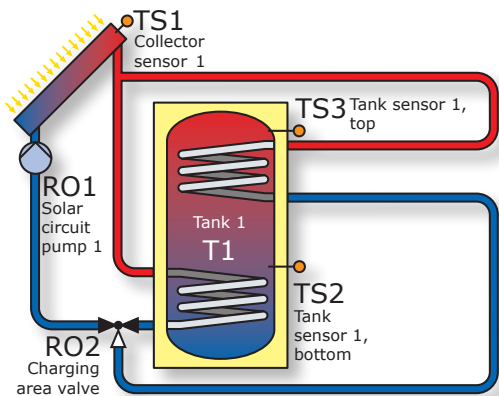

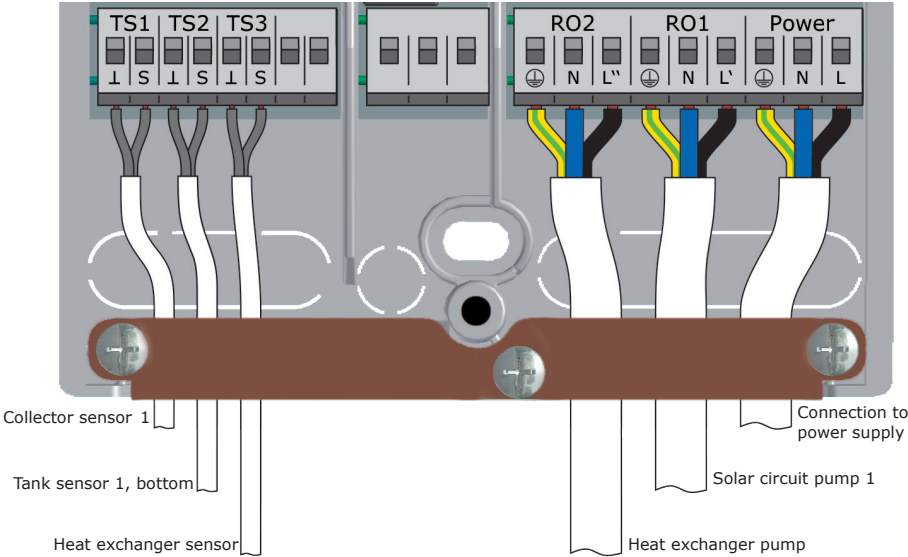
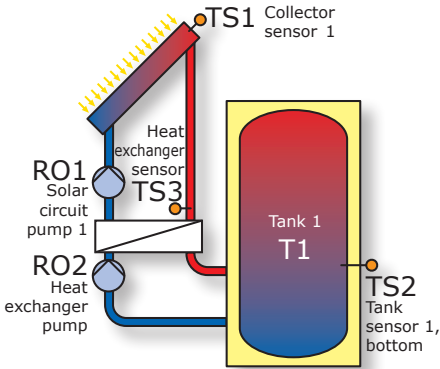




Hydraulic system 6

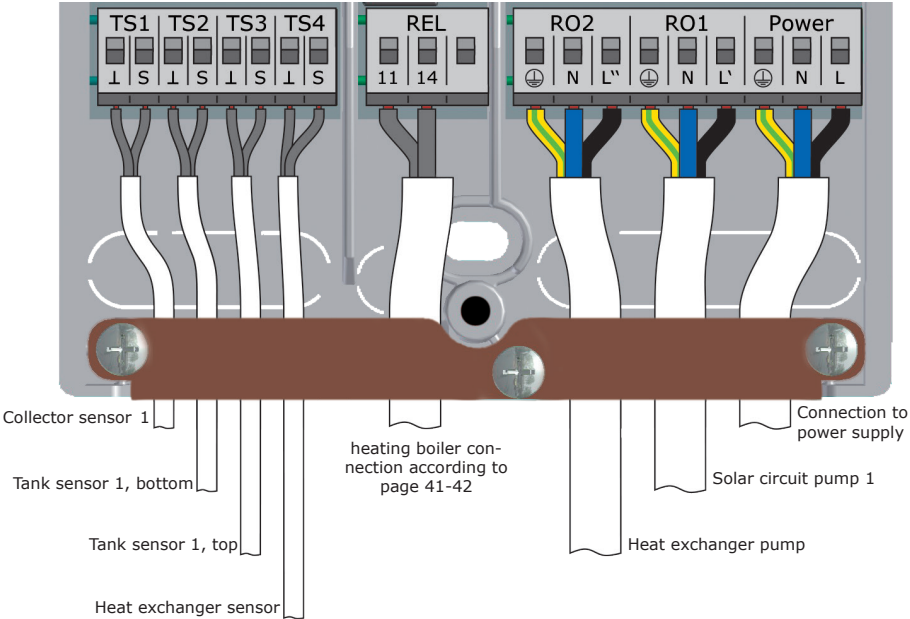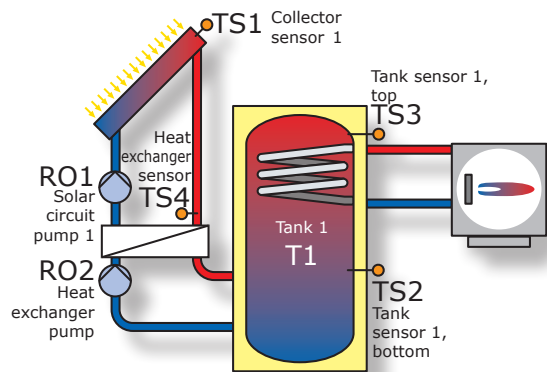

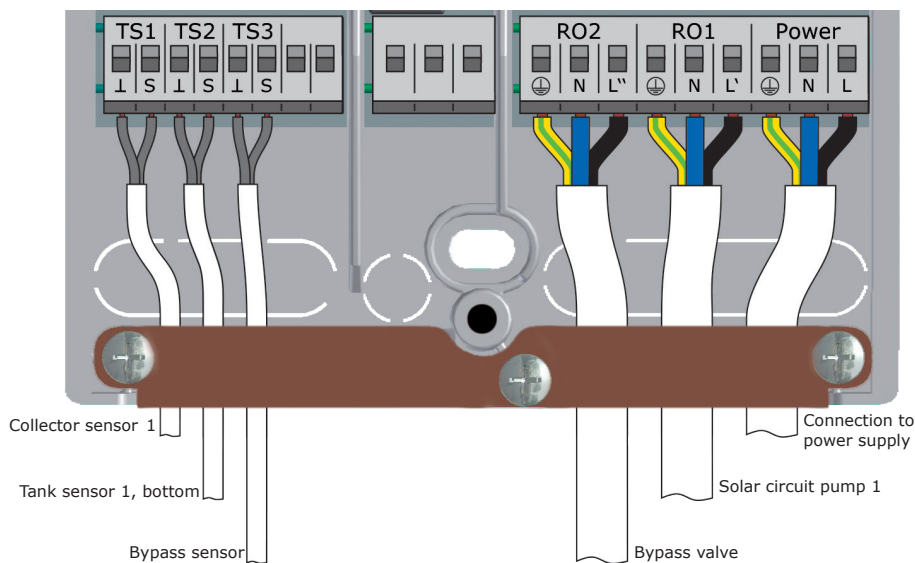
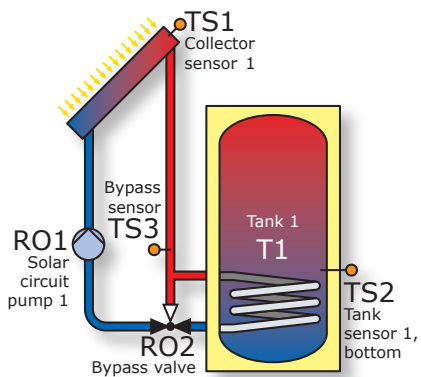




Hydraulic system 8

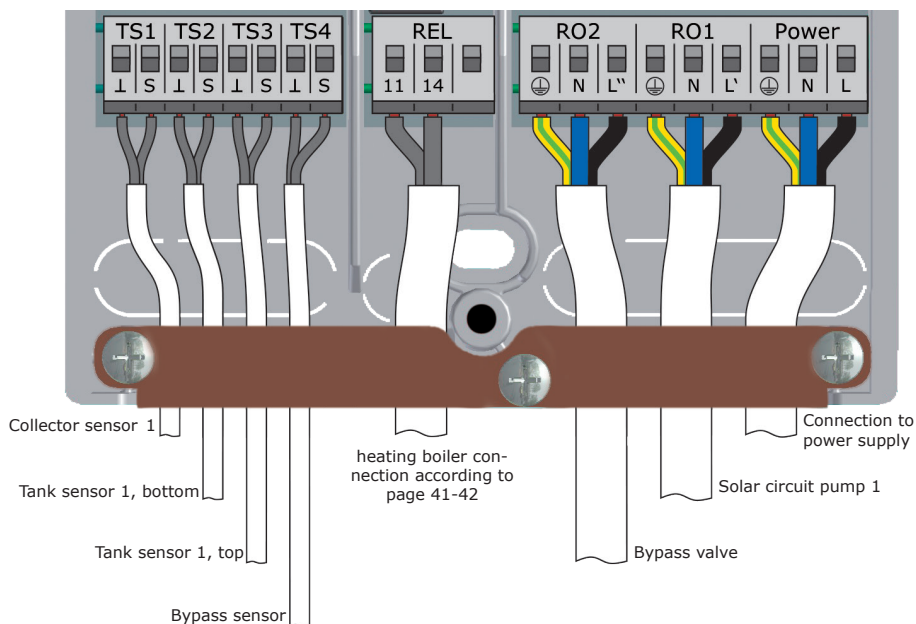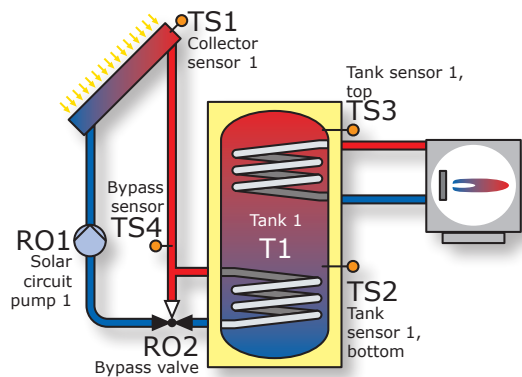

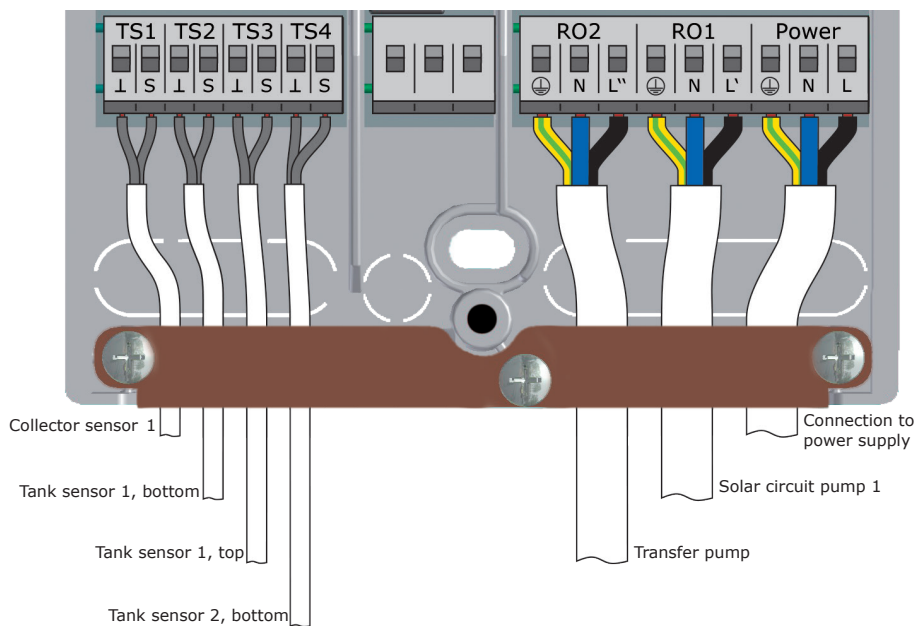
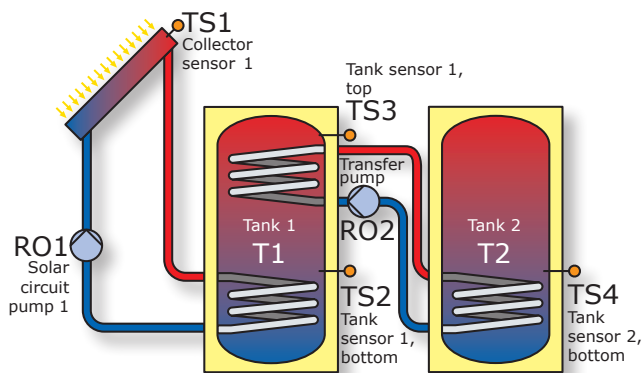




Hydraulic system 10

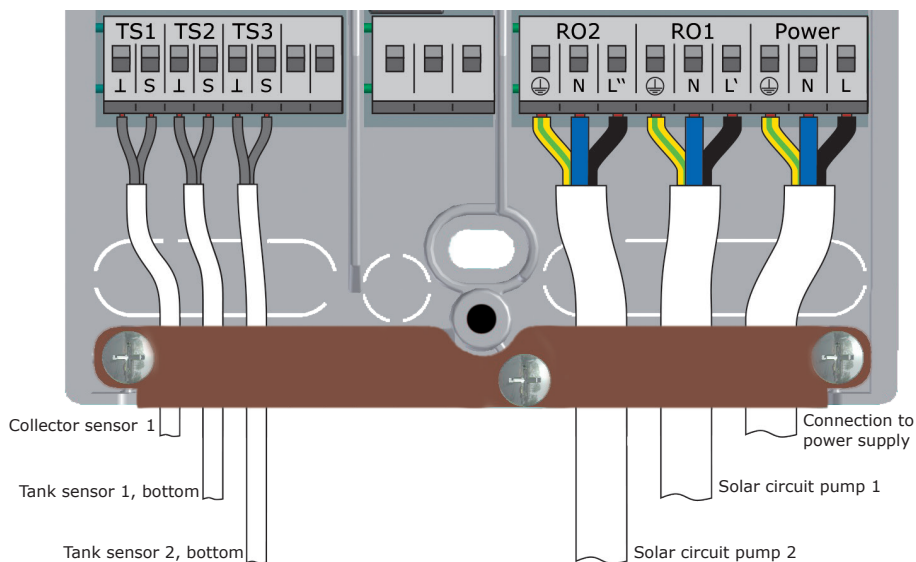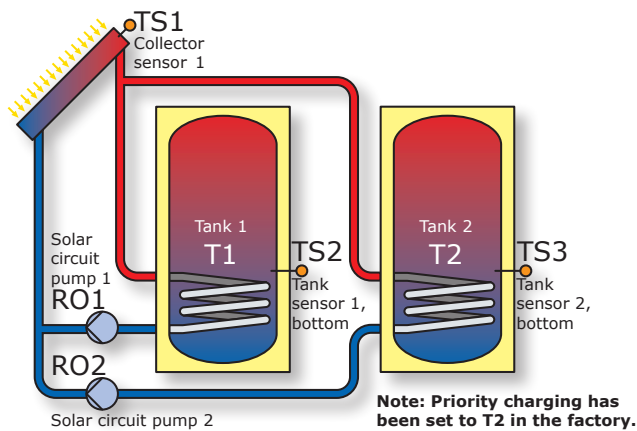

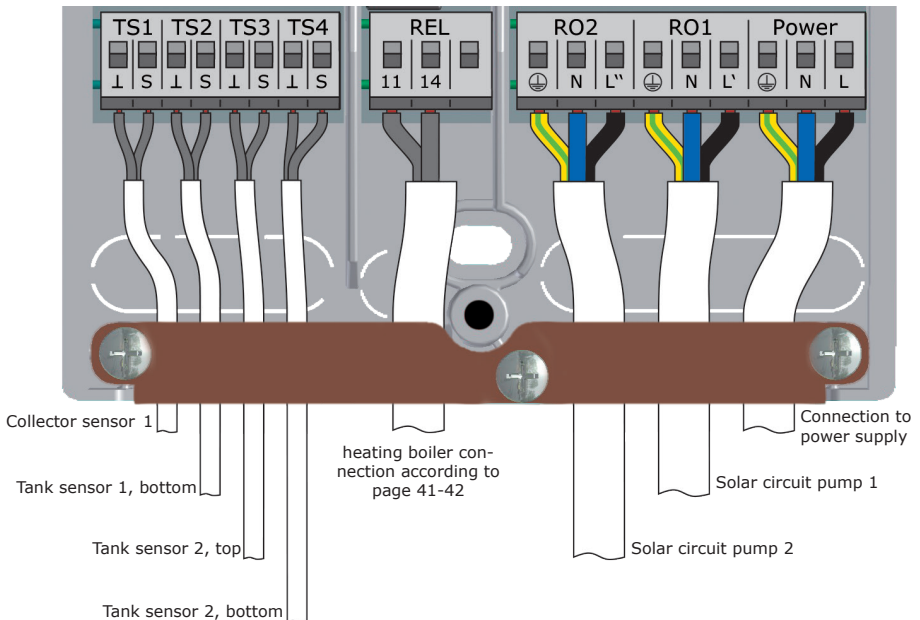
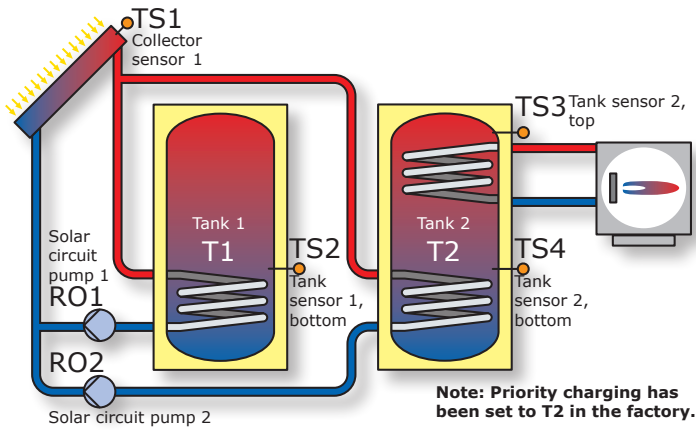




Hydraulic system 12

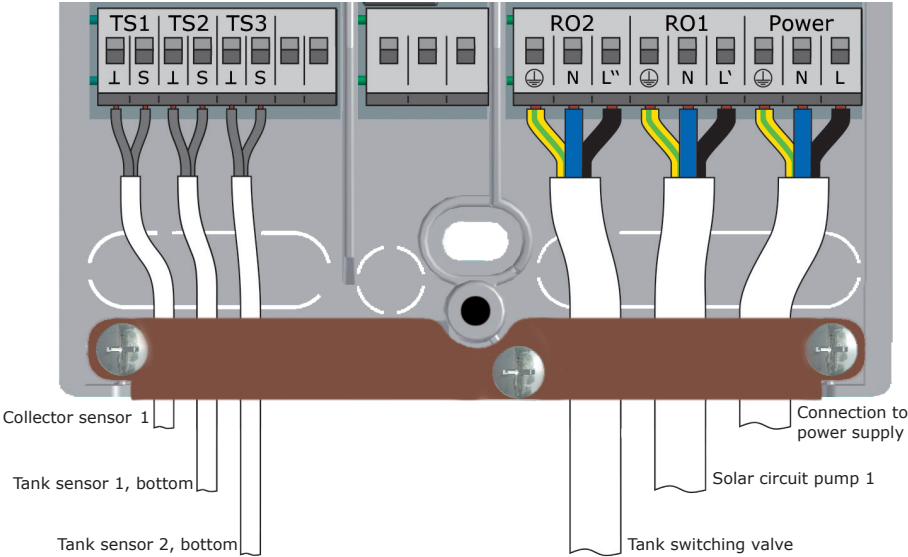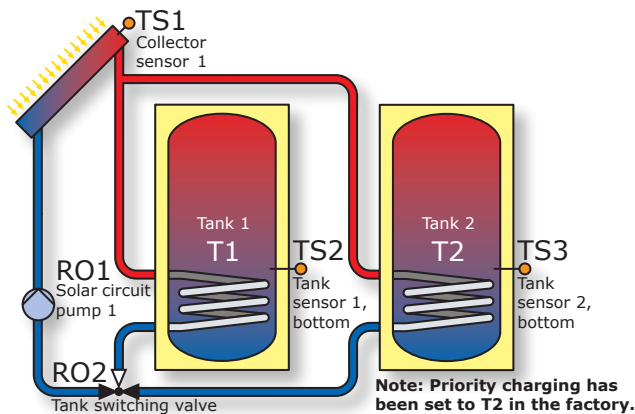

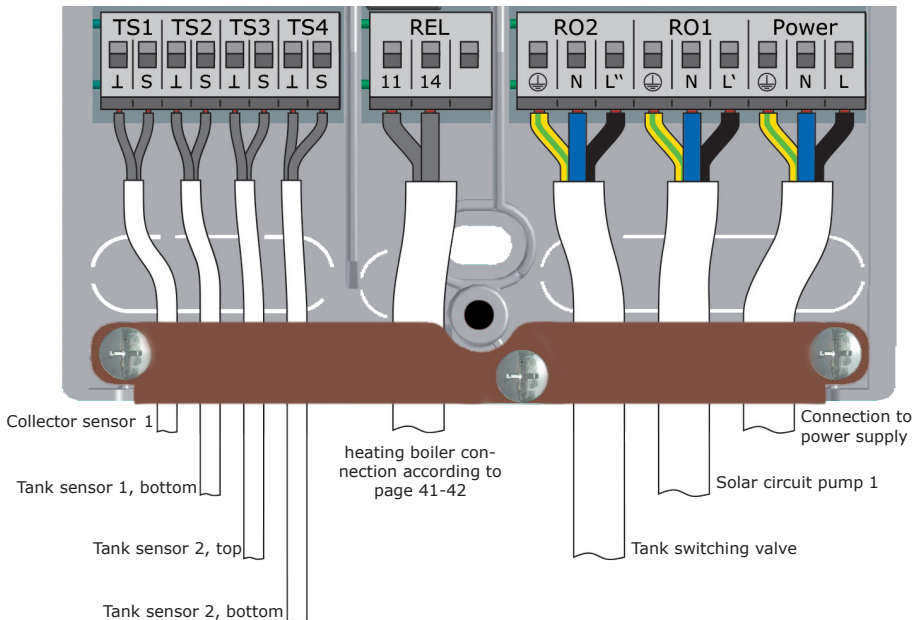
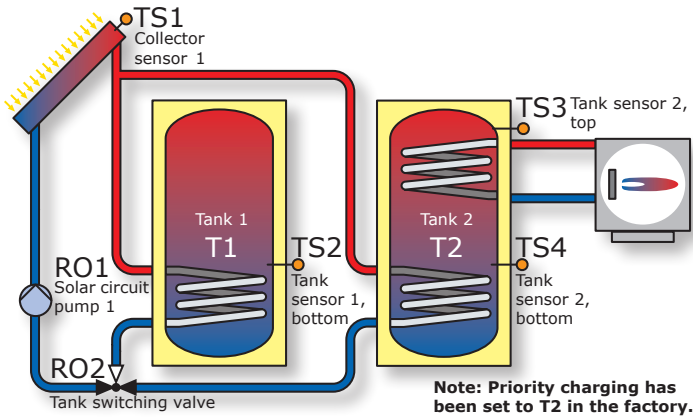




Hydraulic system 14

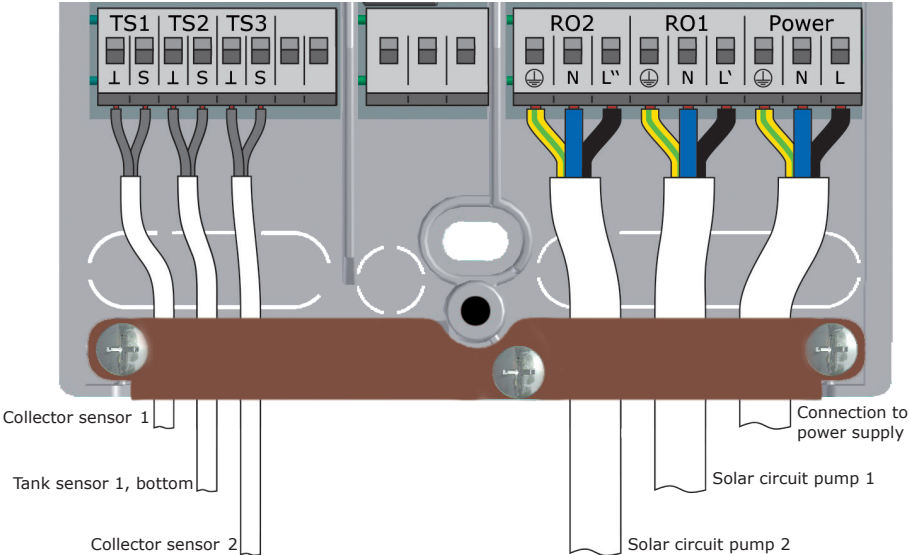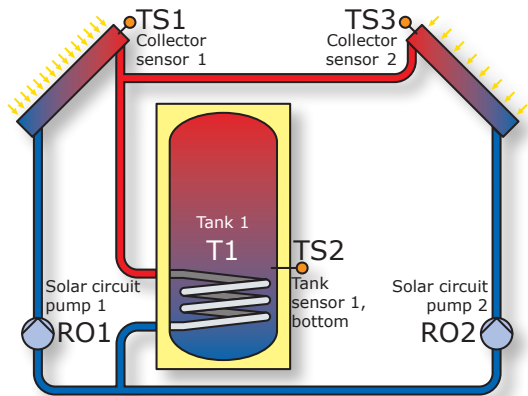

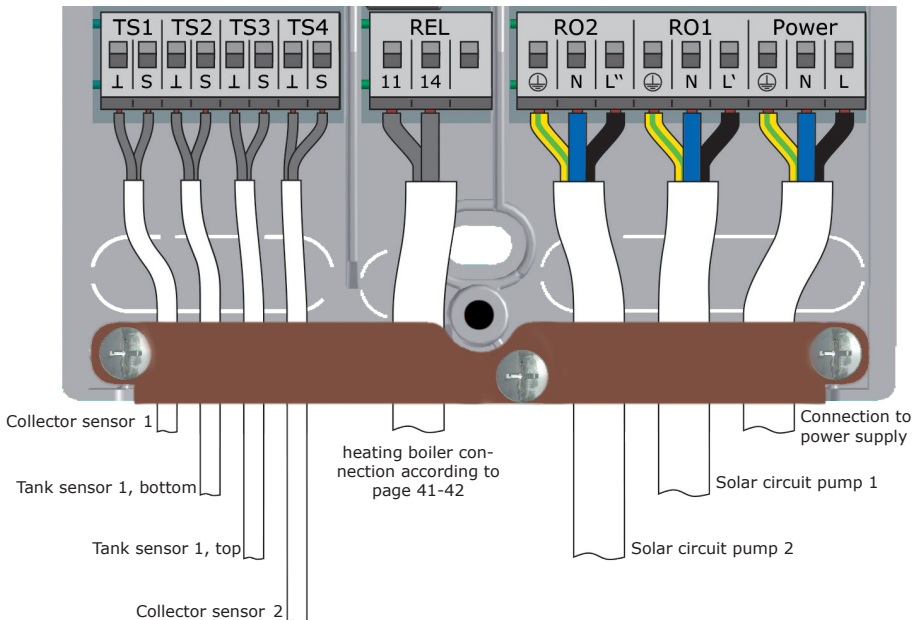
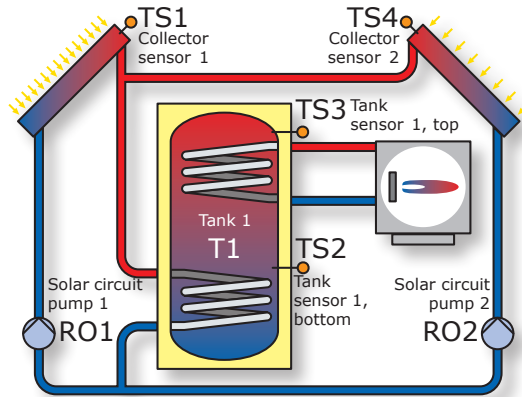


Hydraulic system 16

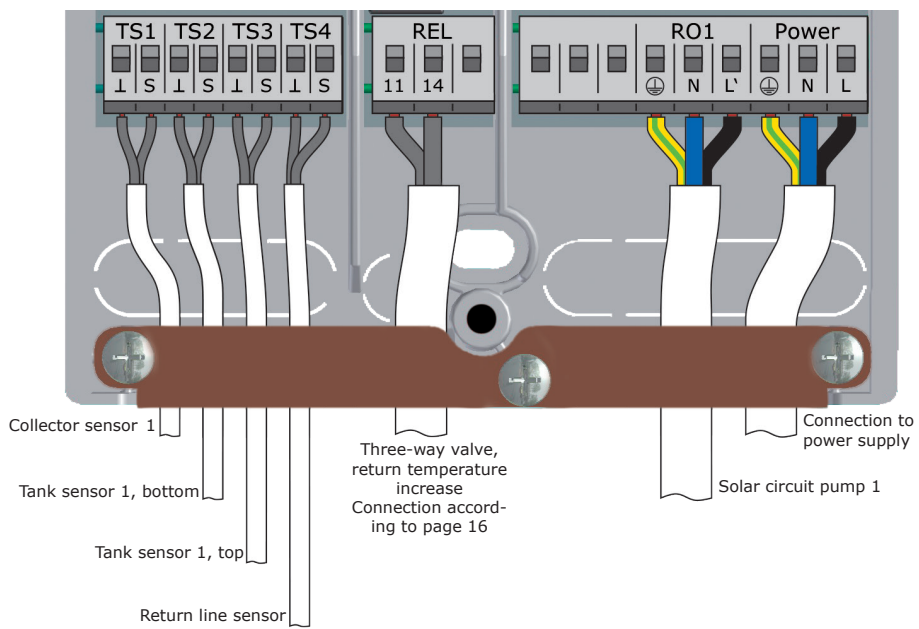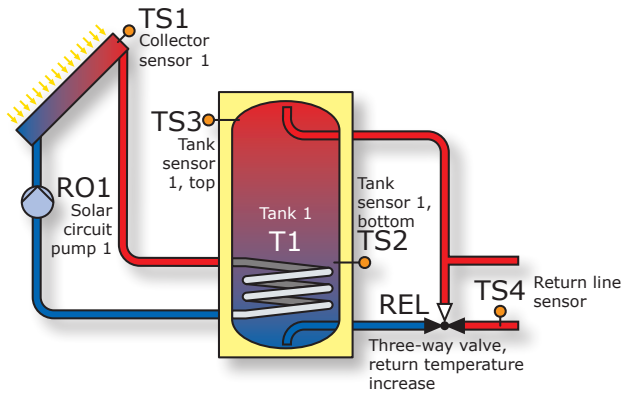

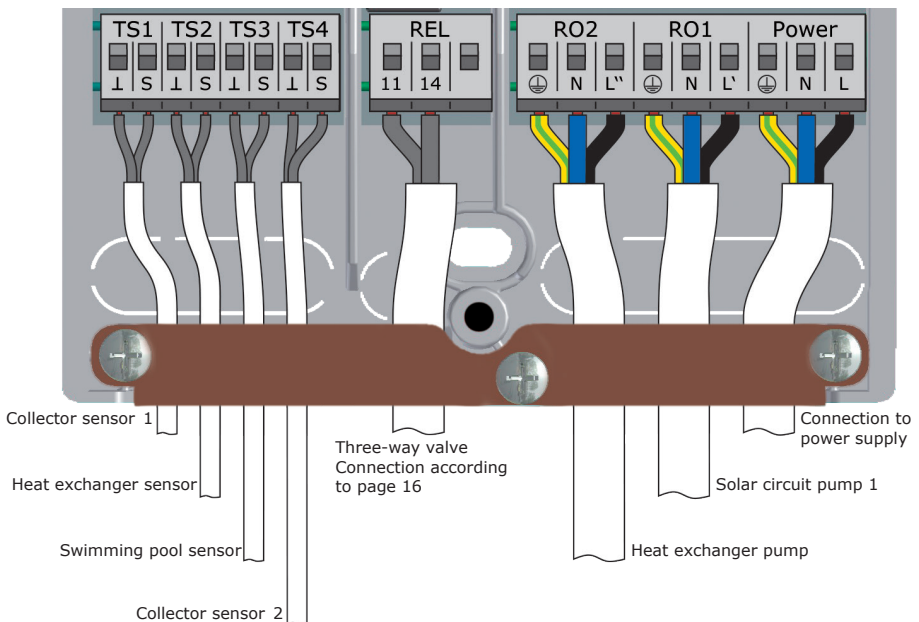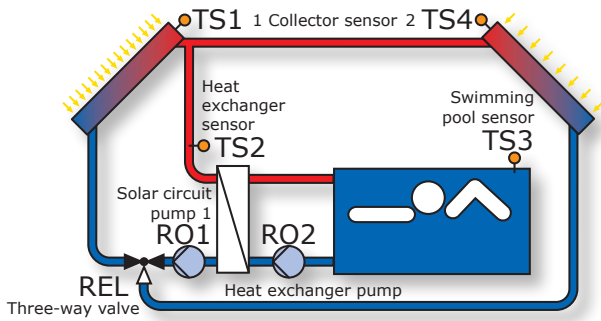

Hydraulic system 18

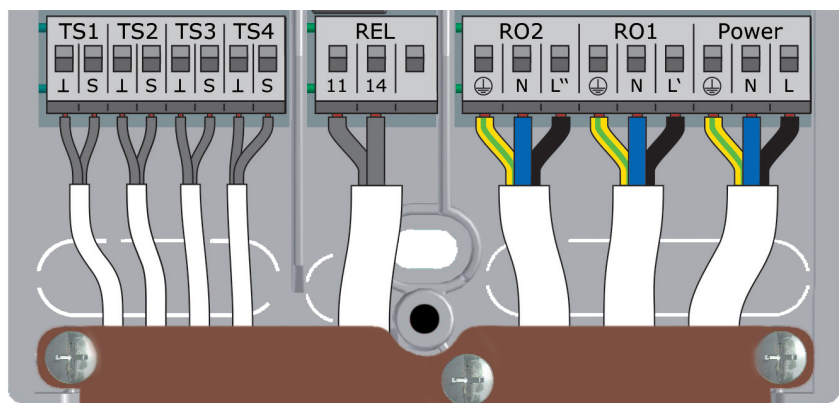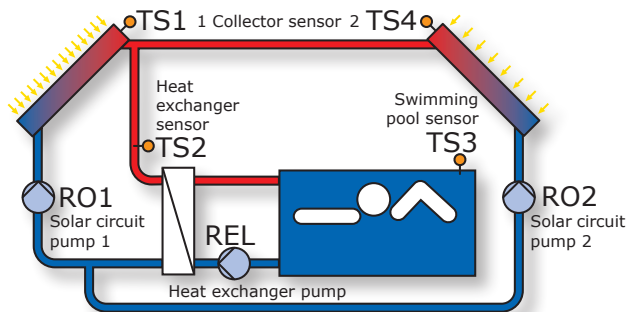

Collector sensor 1

Heat exchanger sensor

Swimming pool sensor

Collector sensor 2


Heat exchanger pump
Connection according to page 16

**Attention !
Maximum
switching
capacity 230VA**


Solar circuit pump 1

Solar circuit pump 2



Connection to power supply

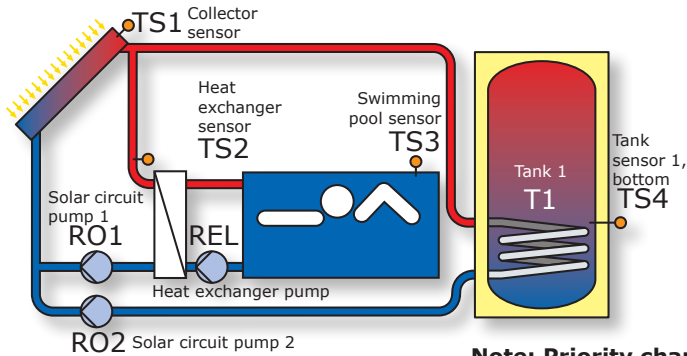

Note: Priority charging has been set to T1 in the factory.

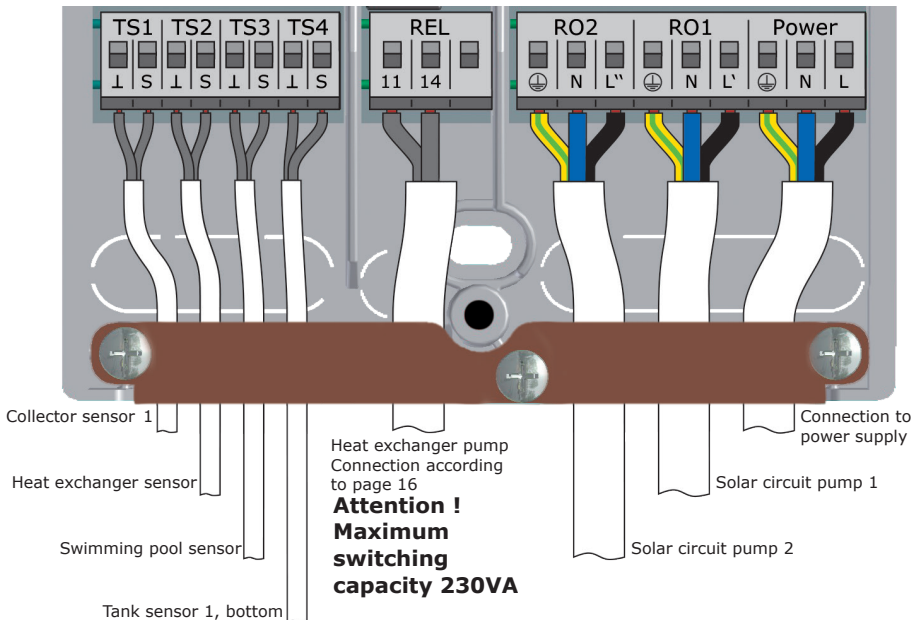


Hydraulic system 20

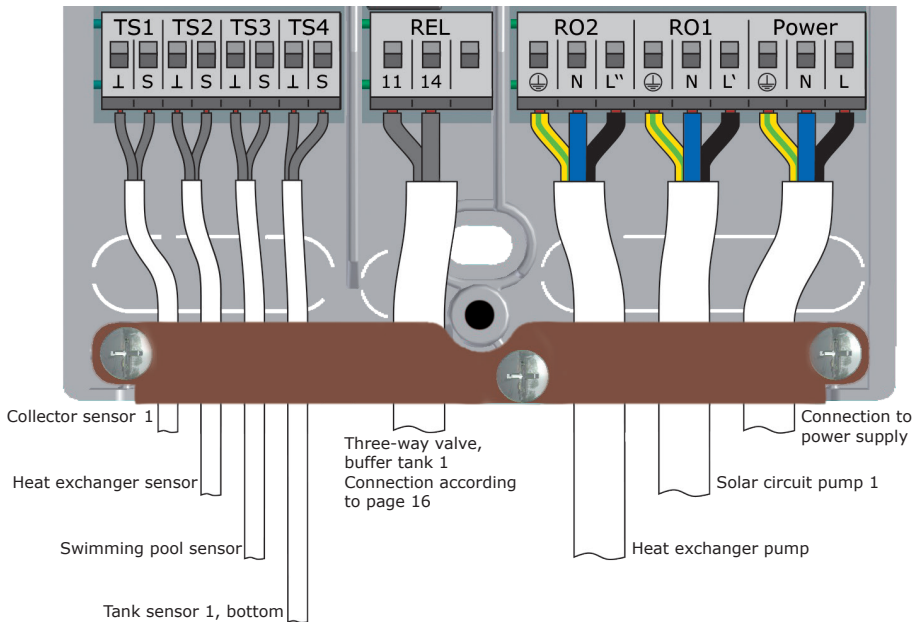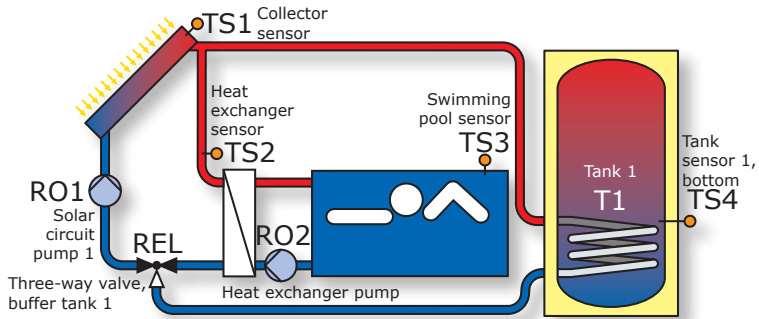

The functions for boiler control are accomplished via the potential-free relay contact which is connected accordingly to the relevant interface of the heating boiler.

The individual functions are assigned the following priorities:

A	Anti-legionella	priority 1
B	recharge suppression	priority 2
C	reheating	priority 3

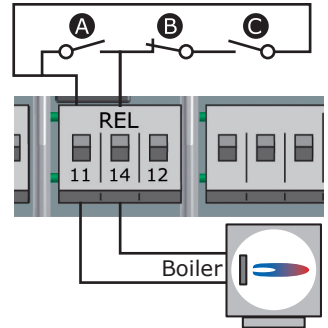

Anti-legionella function

The anti-legionella function checks if the minimum heating for reduction of legionella has been achieved in the tank due to heating activity or solar heat within a set interval.

If no sufficient heating has been achieved by these means the controller starts a reheat cycle, specifically for reduction of legionella.

The fitter must set the parameters based on the applicable general directives and local requirements. The time of the disinfection cycle can be determined freely.

Reheat function

The temperature sensor in the upper tank area supplies the values for reheating.

For oil or gas operated systems, reheating takes place via the heating boiler.

For solid-fuel boilers, reheating takes place via the heat present in the drinking water tank. To this effect, the temperature within the tank must be within preset limits.

The temperature control is interlinked with six time blocks.

Reheating is activated as soon as the temperature falls below the set value by the hysteresis value in the current time block. When the set value is exceeded the reheating cycle stops.

Disable recharge

The efficiency of a solar plant increases as the recharge of the tank from the boiler decreases. Consequently, „disable recharge“ means that recharging of the water tank is blocked by the boiler.

Time-controlled disable recharge

Recharge is blocked by the boiler for specific phases via a time program. Within the preset period of time (for ex. 7 to 19 h), recharge is blocked completely by the boiler without requiring the minimum temperature to this effect.

Time-/temperature-controlled disable recharge

If a minimum temperature in the tank is exceeded, disable recharge is activated. This function can be activated in parallel to the time program.

If the preset minimum temperature (e. g. 45°C) in the tank is exceeded, recharge of the tank is disabled by the boiler.

If, however, the minimum temperature is no longer reached, recharge is enabled by the boiler no matter whether the time program blocks recharge or not.

Efficiency-optimized recharge suppression


For efficiency-optimized recharge suppression two sensors are installed at the top tank sensor position: the original boiler tank sensor of the heating installation and a Pt 1000 which is connected to TS3 of the Energy Pro.

The fitter can define the prioritization of the parameters in menu 1.4.3.:

Factor 1 represents the parameter for the past yield, factor 2 reflects the parameter of the energy content.

The higher the selected relevant factor is, the lower the impact of its variable, for parameter values from eight the related active factor approaches zero.

The recharge suppression temperature is recalculated once a day.

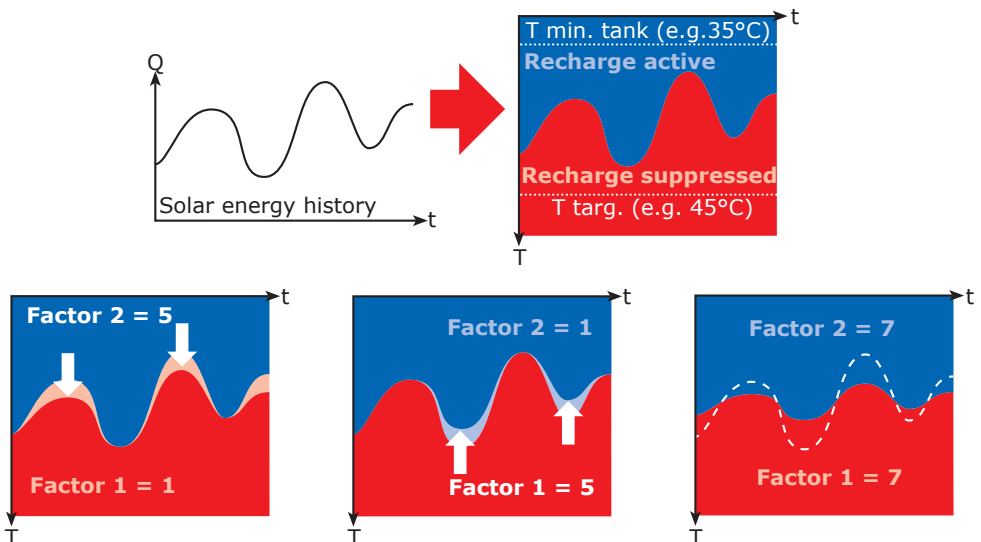

Important!

For commissioning, the controller must be assembled correctly, all inputs and outputs must be connected and ready for operation, the strain relief device must be screw-fastened and the terminal cover closed!

This is an explanation in terms of an example of commissioning of the differential temperature controller **Energy Pro**; details vary along with the hydraulic configuration and the software version.

Commissioning is communicated in plain text; the user must make a selection, acknowledge and - if applicable - jump to the next menu item.

The differential temperature controller **Energy Pro** accompanies you during the entire configuration and interrogates everything it must know for optimum operation.

Now, the power supply of the controller must be switched on - the display screen appears.

0.1 Language	
Deutsch	<input type="checkbox"/>
English	<input checked="" type="checkbox"/>
Français	<input type="checkbox"/>
Italiano	<input type="checkbox"/>
Polski	<input type="checkbox"/>
04.07.2012	09:12

>0.1 Language< appears after a short booting sequence.

Various languages are available in this version of the **Energy Pro**.

Activate the required version and acknowledge by pressing >Next<.

1.2.1 Date setting	
Date	04.07.2012
Time	09:12
Auto. Clock Change	<input checked="" type="checkbox"/>
04.07.2012	09:12

>0.2 Time/date< appears.

Press >OK< - the hour is highlighted in colour.

Turn the rotary encoder until the correct figure appears, and acknowledge via the >OK< button.

The controller accepts the value and jumps to the minute setting.

In this way, all values for time and date can be entered.

If the differential temperature controller is installed at a location where daylight-saving time exists, the time shift can be activated here.

Acknowledge by pressing >Next<.

>0.3 Inputs< appears.

Select and activate the input interfaces TS1 to TS4 used and assign the selected function to them by scrolling.

Once all inputs have been assigned correctly, acknowledge by pressing >Next<.

0.3 Inputs	
TS1	---
	Coll 1
TS2	---

TS3	---

04.07.2012 09:12	

Important!

At the interface TS3 or TS4, an impeller sensor can be selected as flowmeter via >Impeller<.

>0.4 Volumetric flow< appears.

If TS3/TS4 has already been assigned to >Impeller<, >Impeller< will appear here in terms of sensor system. The number of pulses per litre still has to be selected.

If different features (or no features) are assigned to TS3/TS4, a vortex sensor or a flow rate detector can be selected via pump activation. To this effect, the vortex volumetric flow sensor installed or the max. pump flow rate still have to be defined.

Acknowledge by pressing >Next<..

0.4 Volumetric flow	
Sensor system	Vortex
Flow rate	Grundfos 1-20 l/min
	Next
04.07.2012 09:13	

Important!

A high-efficiency pump can be connected to TS4.
The WILO ST 25/7 PWM is preassigned.

0.5 Outputs

RO1 ---
RO2 ---
REL ---

Next

04.07.2012


09:13

>0.5 Outputs< appears.

Select and activate the output interfaces RO1, RO2, REL used and assign them to the selected function by scrolling.

Once all outputs have been assigned correctly, acknowledge by pressing >Next<.

System 1/3

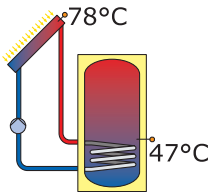

04.07.2012

09:13

Now, the controller offers the hydraulic systems which are possible due to the assigned inputs and the selected outputs.

By turning the rotary encoder, the required system can be selected (here system 1 of 3 possible ones) and acknowledged via the button >OK<.

Note!

Here, access to all plant layouts is possible for testing purposes via the option >Show all<. However, for correct operation, one of the plant layouts suggested by the controller must be selected.

>0.7 Checklist< appears.

Here, the submenus Test outputs and Holiday function are made available.

By selecting >SP 1 (top), a scrollbox is displayed in which an appropriate input (TS1 - TS4) can be assigned.

Select Test outputs and activate by pressing the OK button.




>0.8 Test outputs< appears.

Here, the outputs can be activated manually via the >OK< button to test the function of the activated output or of the connected unit.

If not all pumps and valves are working properly, the plant elements in question and the cabling must be verified and repaired.

Acknowledge by pressing >Next<.

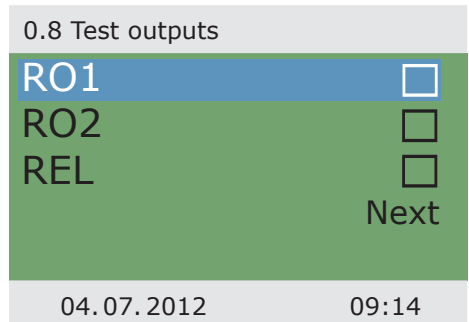


>0.7 Checklist< reappears.

As the plant, when not in use, is only supplied with heat, but no heat is withdrawn, it may be subject to overheating and damage.

Thus, a >holiday function< was programmed which minimizes heat input.

Here, the holiday function can be set - call up by pressing the >OK< button.

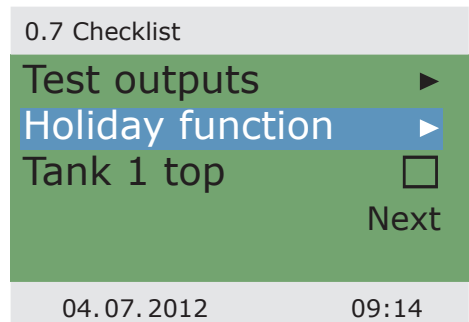

0.7.2 Holiday function

Tank recooling ☐
 Soft charge ☐
 T-ON 120.0°C
 T-OFF 100.0°C

Next ►

04.07.2012

09:14

Various options can be selected for the holiday function.

At lower ambient temperatures (e. g. at night), tank recooling tries to dissipate heat via the collectors.

The soft charge circuit is designed so that the heat input into the tank is as low as possible.

The appropriate switch-ON and OFF temperatures must be varied as required.

Acknowledge by pressing >Next<.

0.9 End

You have completed commissioning!

Next

04.07.2012

09:15


>0.7 Checklist< reappears.

Acknowledge by pressing >Next<.

>0.9 End< appears.

By >Next<, the controller changes over to >Automatic mode<.

System 1

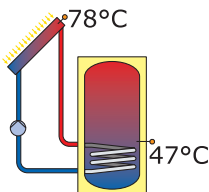

Commissioning is complete.

As of this point, the **Energy Pro** controls the solar thermal plant automatically.

04.07.2012

09:16

Automatic mode


In automatic mode, the screen displays the date, the time and the active hydraulic system.

The current temperature is displayed for each temperature sensor.

The pump activity is displayed on the display as animation.

There is no need for intervention by the fitter or operator.

System 1

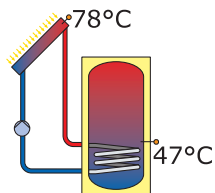


04.07.2012

09:17

Note!

Check the display screen of the **Energy Pro** on a regular basis to be able to eliminate any malfunctions promptly!

System 1

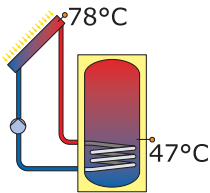

On the controller, the user can make various settings and obtain information about states and processes.

To this effect, press the button >OK< in automatic mode.

04.07.2012

10:19

1 Main Menu

- Evaluation ▶
- Settings ▶
- Basic functions ▶
- Efficiency functions ▶
- Protective funct. ▶▼

>1 Main menu< appears.

A list of subitems appears

By scrolling ...

04.07.2012

10:19

1 Main Menu

- Efficiency functions ▶▲
- Protective funct. ▶
- Monitoring ▶
- Login ▶
- About smart Sol ▶

...the lower part of the menu is displayed.

Once the first subitem

>Evaluation< is selected, ...

04.07.2012

10:19

...>1.1 Evaluation< appears.

Another selection level appears.

Once the first subitem

>Measured values< is selected, ...

1.1 Evaluation

Measured values ▶

Service hours ▶

CO2 savings ▶

Heat quantities ▶

Error list ▶

04.07.2012

10:20

...>1.1.1 Measured val...< appears.

Here, the temperatures and dates concerning the controller are displayed.

If additional tank sensors have been defined on commissioning, these measurands also appear here.

By scrolling ...

1.1.1 Measured val...

Coll 1 78.2°C

Tank 1 bot. 47.0°C

Tank 2 bot. 42.1°C

Tank 2 top 61.4°C

Solar pump 1 80% ▼

04.07.2012

10:20

...the lower part of the menu (if available) is displayed.

Return to >1.1 Evaluation<.

Once the second subitem

>Service hours< is selected, ...

1.1.1 Measured val...

Tank 2 bot. 42.1°C ▲

Tank 2 top 61.4°C

Solar pump 1 80%

Solar pump 2 34%

Boiler OFF

04.07.2012

10:20

1.1.2 Service hours

Solar pump 1 112h
Solar pump 2 94h
Reset

04.07.2012

10:21

...>1.1.2 Service hours< appears.

The operating time of the activated plant components is displayed in hours.

By actuating the menu item >Reset<, all counters are reset to zero.

The values are saved once per day, so that one day max. is „lost“ in case of failure of the power supply.

Return to >1.1 Evaluation<.

Once the third subitem >CO2 savings< is selected, ...

1.1.3 CO2 savings

Activation ☒
Savings 447 kg
Reset
Fuel Natural gas

04.07.2012

10:21

...>1.1.3 CO2 savings< appears.

Here, assessment of the saved carbon dioxide can be activated, read and reset.

By selecting >Fuel<...

Edit

Fuel
Natural gas

Restore last value
Factory settings

04.07.2012

10:22

...>Edit< appears.

Here, the fuel types natural gas or fuel oil can be selected for a calculation of CO₂.

Return to >1.1 Evaluation<.

Continue with >Heat quantities<.

>1.1.4 Heat quantities< appears.

Activation starts a counter which determines the heat yield of the solar plant.

The menu item Max. flow can be used to set the max. pump flow rate for flow rate detection.

Press >Reset< to reset the counter to 0.

The evaluation period can be selected via the >Diagram< - >Week<, >Month< or >Year<

The evaluation appears as a bar graph.


Continue with >Error list<.

>1.1.5 Error list< appears.


Here, a table of the last errors occurred appears for information.

By selecting a fault ...


1.1.4 Heat quantities

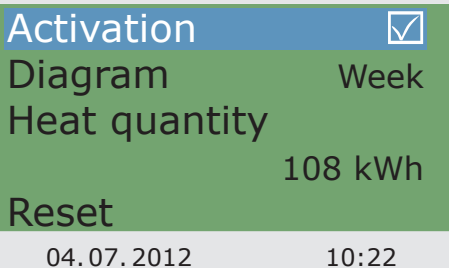

1.1.4 Heat quantities

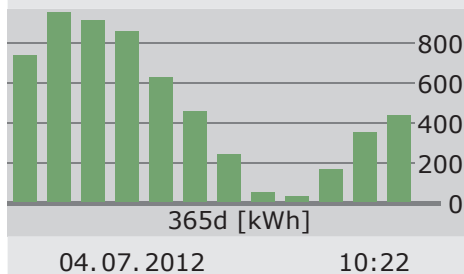

1.1.5 Error list

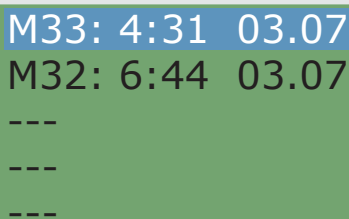

1.10 Error list

M05:
Sensor short-circuit
on TS3!
Press ESC to return

04.07.2012

10:22

... the error message appears in plain text.
 If necessary, take the appropriate measures.
 Return to >1 Main menu<.
 Continue with >Settings<.

1.2 Settings

Date/Time ▶
 Language ▶
 Display ▶
 Rem.SD card safely
 Factory settings

04.07.2012

10:23

>1.2 Settings< appears.
 Another selection level appears.
 Once the first subitem
 >Date/Time< is selected, ...

1.2.1 Date setting

Date 04.07.2012
Time 10:23
Auto. Clock Change ☒

04.07.2012

10:23

...>1.2.1 Date settings< appears.
 Here, date and time can be set in
 case of deviation or an extended
 period of deenergizing.
 If the differential temperature controller is
 installed at a location where daylight-saving
 time exists, the time shift can be activated
 here.
 Select the subitem
 >Date< or >Time< by pressing >OK<.

One group of figures each is activated and can be varied via the rotary encoder; whenever >OK< is pressed, the activation jumps to the next group.

Return to >1.2 Settings<.

Continue with >Language<.

>1.2.2 Language< appears.

Here, the user can change over to another available language.

Continue with >Display<.

>1.2.7 Display< appears.

>Brightness< serves to adjust the backlighting of the display in steps of 10% from 10% to 100%.

>Blanking time< is used to determine the time after which, in case of inactivity, backlighting is reduced from the set value to 10%. Adjustable in the range from 30 to 255 seconds.

Return to >1.2 Settings<.

1.2.1 Date setting

Date 04.07.2012
Time 10:23
Auto. Clock Change ☒

04.07.2012

10:23

1.2.2 Language

Deutsch ☐
English ☒
Français ☐
Italiano ☐
Svenska ☐

04.07.2012

10:23

1.2.7 Display

Brightness 100%
Blanking time 180s

04.07.2012

10:23

1.2 Settings

Date/Time ▶
 Language ▶
 Display ▶
 Rem.SD card safely
 Factory settings

04.07.2012

10:24

>SD-Karte sicher entfernen< muss vor Entnehmen der Micro-SD-Card angewählt werden.

The last menu item is >Factory settings<.

By selecting and pressing the button >OK<, followed by >esc<, the preset values are deleted and replaced by the factory settings.

Return to >1 Main menu<.

Continue with >Basic functions<.

1.3 Basic functions

Thermostat ▶
 Tube collector ▶
 Holiday function ▶
 Delta T control ▶
 Increase return T ▶

04.07.2012

10:25

>1.3 Basic functions< appears.

Another selection level appears.

Once the first subitem >Thermostat< is selected, ...

1.3.1 Thermostat

Thermostat RO2 ▶
 Thermostat REL ▶

04.07.2012

10:25

...>1.3.1 Thermostat< appears.

The controller's free outputs can be used as thermostats for various applications.

In professional mode, presettings must be made to this effect - your fitter will explain the appropriate function to you, if necessary.

By selecting a subitem ...

...the appropriate activation screen is displayed.

Return to >1.3 Basic functions<.

Continue with >Tube collector<.

1.3.1 Thermostat R...

Activation



04.07.2012

10:25

>1.3.2 Tube collectors< appears.

This option is to be activated in case vacuum tube collectors are used.

Return to >1.3 Basic functions<.

Continue with >Holiday function<.

1.3.2 Tube collector

Activation



04.07.2012

10:25

>1.3.3 Holiday funct...< appears.

Here, you enter the time of your next holiday. "Holiday" means that the heating/warm water plant is not used in summer.

In this case, the controller will adapt control for the specified period so that overheating of the plant is prevented.

First select the subitem >Start<, then >End< by pressing >OK<.

1.3.3 Holiday funct...

Start

19.07.2012

End

02.08.2012

04.07.2012

10:26

Edit
<div>Start</div> <div>19.07.2012</div> <hr/> <div>Restore last value</div> <div>Factory settings</div>
04.07.2012 10:26

>Edit< appears.

Here, the dates of your absence are entered. Return to >1.3 Basic functions<.

Continue with >Delta T control<.

1.3.5 dT control
<div>dT ON 1 8.0k</div> <div>dT OFF 1 4.0k</div> <div>dT ON 2 8.0k</div> <div>dT OFF 2 4.0k</div>
04.07.2012 10:27

>1.3.5 dT control< appears.

Here, parameters of the controller can be changed.

The factory settings of the **Energy Pro** can be used for almost all plants.

Ask a fitter before making changes at this point.

Return to >1.3 Basic functions<.

Continue with >Fixed T control<.

1.3.6 Fixed temp.c...
<div>T fixed 1 70.0°C</div> <div>T fixed 2 70.0°C</div>
04.07.2012 10:27

>1.3.6 Fixed temp.c...< appears.

Here, the temperature values for the collector panels are entered which are to be achieved via control of the pump delivery rate in question.

The factory settings of the **Energy Pro** can be used for almost all plants.

Return to >1.3 Basic functions<.

Continue with >Increase return T<.

>1.3.8 Increase retu...< appears.

Parameters for return flow temperature increase can be defined here.

Ask a fitter before making changes at this point.

Return to >1 Main menu<.

Continue with >Post Heating Request<.

1.3.8 Increase retu...

Activation	<input checked="" type="checkbox"/>
T ON	8.0K
T OFF	4.0K
T min	15.0°C

04.07.2012

10:27

>1.3.10 Post Heatin...< erscheint.

The reheating control reacts to the values of the top tank sensor. If the temperature falls below >t charge< minus the hysteresis, the control activates the reheating cycle via the heating boiler. When the set value is reached the reheating cycle is stopped.

Return to >1 Main menu<.

Continue with >Efficiency functions<.

1.3.10 Post Heatin...

Hysteresis	10.0K
Time block 1	▶
Time block 2	▶
Time block 3	▶
Time block 4	▶▼

04.07.2012

10:27

>1.4 Efficiency funct...< appears.

Another selection level appears.

Once the first subitem

>disable recharge< is selected, ...

1.4 Efficiency funct...

Disable recharge	▶
------------------	---

04.07.2012

10:28

1.4.3 Disable recha...

Activ.time progr.	<input type="checkbox"/>
Activation T min.	<input type="checkbox"/>
Activat. Tmin float	<input type="checkbox"/>

04.07.2012

10:28

... >1.4.3 disable recha...< appears.

This option must be activated if recharging of the warm water tank is to be switched off as a function of time or temperature.

To this effect, the fitter must make the appropriate presettings.

Return to >1 Main menu<.

Continue with >Protective functions<.

1.5 Protective funct.

Collector defrost.	▶
Tank cooling	▶
Soft charge	▶

04.07.2012

10:29

>1.5 Protective funct.< appears.

Another selection level appears.

Continue with >Collector defrost.<.

1.5.2 Defrosting

Activation	<input type="checkbox"/>
------------	--------------------------

04.07.2012

10:29

>1.5.2 Defrosting< appears.

>Defrosting< can be used to heat frozen collectors.

At the same time, the tank is cooled!

This is a one-time action which must be repeated as required.

Return to >1.5 Protective functions<.

Continue with >Tank cooling<.

>1.5.5 Cooling funct.< appears.

This option must be activated if, during a heat wave, the heat input exceeds the energy withdrawal.

In this case, the controller cools the tank via the collectors, e. g. at night.

Return to >1.5 Protective functions<.

Continue with >Soft charge<.

1.5.5 Cooling funct.

Activation



04.07.2012

10:29

>1.5.6 Soft charge< appears.

This option should be activated if an extended spell of hot, sunny weather is to be expected. Thus, the heat input in the tank is reduced.

Return to >1 Main menu<.

Continue with >Monitoring<.

1.5.6 Soft charge

Activation



04.07.2012

10:29

>1.6 Monitoring< appears.

Here, the error list can be called up. The required information appears on the display.

Return to >1 Main menu<.

Continue with >Login<.


1.6 Monitoring

Error list



04.07.2012

10:29

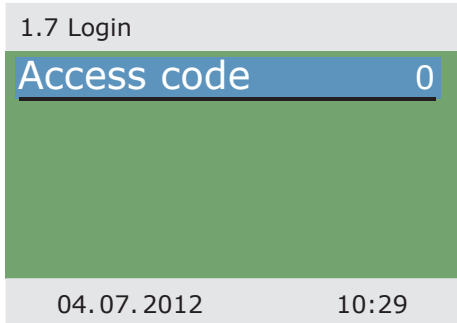


>1.7 Login< appears.

Here, the fitter can enter his/her access code to perform further settings and changes.

Return to >Main menu<.

Continue with >About **smart Sol**<.

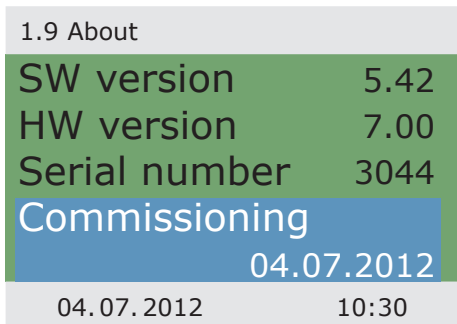

>1.9 About< appears.

Here, the software and hardware version of the controller, the serial number and the date of commissioning appear.

This information is required for repairs and for version management.

If no entry is made within the preset time (30 - 255 s) on the **Energy Pro**, the display returns to >System<.

>esc< is used to return to the home screen from every menu.


Malfunction

System 1



The screen on top right shows the ›Attention‹ symbol which points out a notification or an operating malfunction.

Select via ›OK‹.

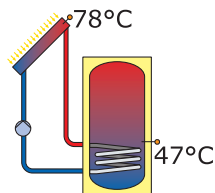

04.07.2012

10:32

If ›Safety function‹ appears in the display, this is a message, no malfunction.

In this case, there is no deficiency, but limits have been exceeded.

The controller indicates that a protective function has been triggered.

The message is only active until normal operation has been restored.

1.10 Service Wizard



Safety function
Solar circuit
emergency cut-off

04.07.2012

10:32

Note!

If a malfunction message appears in the display, the operator can define the possible causes by means of the Service Wizard so that he/she can provide the fitter with precise information.

The differential temperature controller **Energy Pro** communicates malfunction processes in plain text. The Service Wizard indicates the possible causes of malfunctions on the basis of the detected symptoms and thus supports immediate and comfortable detection of deficiencies.

There may be various deficiencies in a solar thermal system, which require a wide variety of approaches. The controller communicates every step to the operator or fitter via the screen, so that there is no need to describe all malfunctions in detail in this operating manual.

Here, a malfunction message with troubleshooting process is presented as an example.



Danger!

Mortal danger due to electrocution!
For troubleshooting on the plant, disconnect all poles of the power supply reliably and protect it them against being switched on again!



1.10 Service Wizard



M02:
Breakage of
sensor on TS1!
Menu **Next**

04.07.2012

10:33

>1.10 Service Wizard< appears.

The malfunction appears in plan text - here:

>M02: Breakage of sensor on TS1!<.

If an analysis/repair is not required at present, press >Menu< to return to the main menu.

1.10 Service Wizard



M02:
Breakage of
sensor on TS1!
Menu **Next**

04.07.2012

10:33

The Service Wizard helps detect possible causes of malfunctions.

Acknowledge by pressing >Next<.

1.10 Service Wizard



Possible reasons:
Cable/connection ☐
Sensor ☐
Exit

04.07.2012

10:33

For this malfunction, the following causes are assumed: >Cable/connection< or >Sensor< - select the first menu item and confirm by pressing >OK<.

The controller here provides the troubleshooting instruction to check the connection cable.


Perform the measure in accordance with the recommendation.

Acknowledge by pressing >Next<.




More detailed instructions are available if required.


Acknowledge by pressing >Next<.

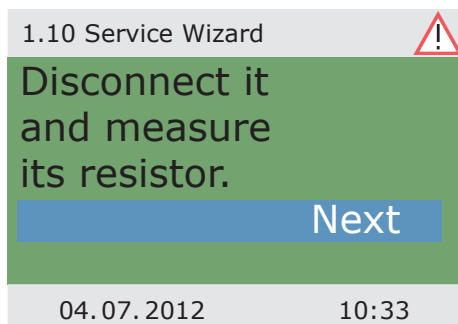


The troubleshooting result is interrogated.

Continue via >Yes< for the case that the malfunction has been determined.

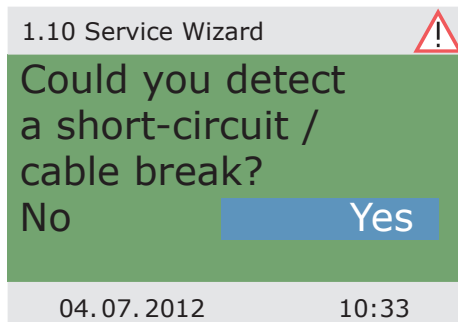

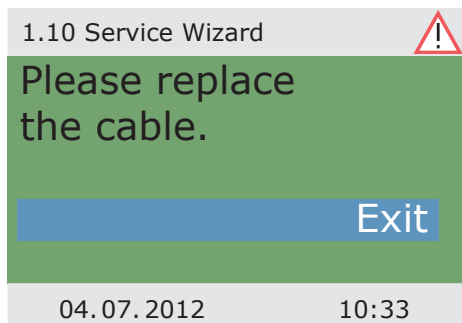

Repair information appears.
Perform the appropriate repair work.
Exit the ›Service Wizard‹
by pressing ›Exit‹.

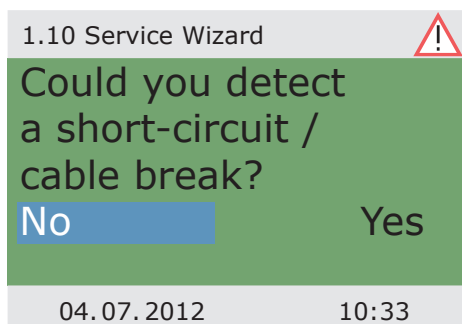

If the cause of the malfunction
has not yet been determined,
troubleshooting can be continued.
Continue with ›No‹.




Select all the sources of malfunctions
listed, and confirm via ›OK‹.

Appropriate instructions appear for each source of faults.

Perform the measure in accordance with the recommendation.

Continue with >Explanation<.

1.10 Service Wizard 

Please check the sensor for plausible values.

Explanation

04.07.2012 10:34

A part of the information and instructions may be provided in close detail, so that ...

1.10 Service Wizard 

Disconnect it and measure its resistor.

Next

04.07.2012 10:34

...the texts may well take several screens.

1.10 Service Wizard 

With PT 1000 sensors 0°C to 100°C correspond to a resistor of 1000 to 1385 Ohm. ▼

04.07.2012 10:34




After description of the troubleshooting measure, the result determined by you is interrogated...



... and the appropriate logical conclusion is made, the repair work displayed.

System 1

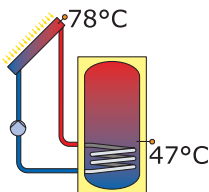

After elimination of the malfunction, the plant screen without the >Attention< symbol appears again on the display, automatic mode is continued.


04.07.2012 10:38

Replacement of fuse



Danger!

Mortal danger due to electrocution! Before opening the terminal cover, disconnect the power supply reliably!

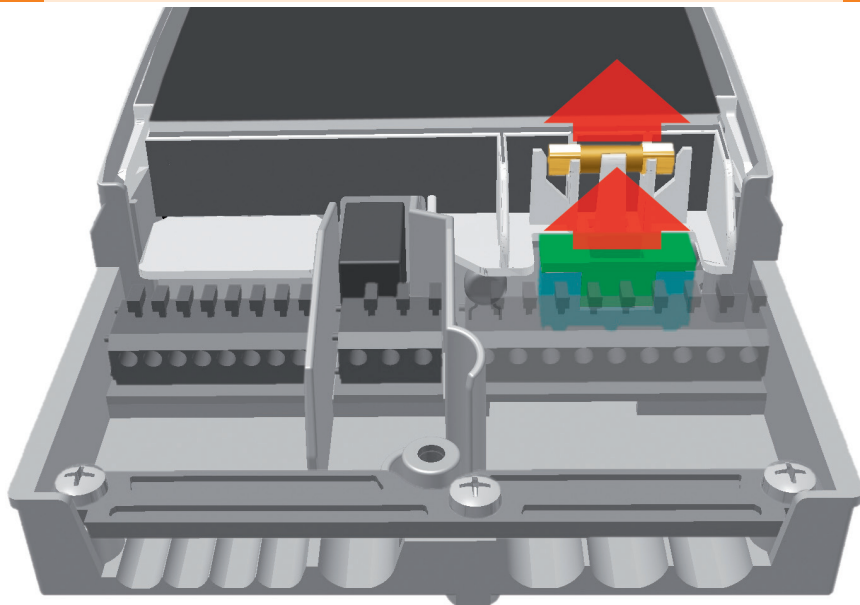

To remove the device fuse, open the terminal cover.

Above the right-hand group of terminals, the fuse base and a spare fuse are located. Pull the upper part of the support and the spare part out.

The fuse link is clamped in the formed piece and is removed together with the plastic holder.



Now, push the micro-fuse laterally out of its holder.

The fuse link is installed by reversing the above order.

Make sure to procure yourself immediately a new spare fuse!



Danger!

Risk of fire due to overload or short-circuit!
Only use fuse links type 5 x 20 mm, T2A!



Important!

In professional mode, settings are made which require detailed knowledge of the heating and solar plant. Moreover, solid specialist knowledge regarding control engineering, hydraulics and solar thermal water heating is required!

If a single parameter is changed, this may affect the safety, function and efficiency of the entire plant!

Leave the settings in professional mode to a specialist workshop, the fitter or heating installer!

Modifications by non-experts tend to result in damage to the plant, rather than to an improvement of its efficiency!

1.7 Login

Access code 0

To enter the professional mode, select >1.7 Login< from the main menu, activate and ...

04.07.2012

10:29

Edit

Access code 365

Restore last value
Factory settings

... enter the access code.


The access code to professional mode is >365<.

The fact that the fitter must be available for his/her customers on 365 days per year may serve as a mnemonic trick.

04.07.2012

10:31

After having returned to >1 Main menu<, the screen shows a list of subitems as in operation mode.

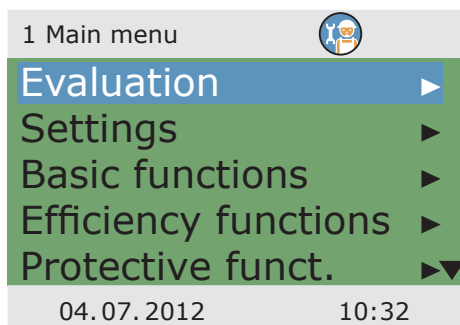

In menu item >1.1 Evaluation<, enhanced setting options for the operation mode are only available in subitem >Heat quantity<.

Continue with >Heat quantities<.




Here, precise settings must be made to enable the controller to set up the heat quantity balance as precisely as possible.

The evaluation period can be selected via the >Diagram< - >Week<, >Month< or >Year<.

Continue to scroll.



1.1.4 Heat quantities 

Ret.line sens. TS3 ▲

Supp. line sens. TS4

Max.rate 1 5.00l/min


Glycol type Water

04.07.2012 10:32

In addition to the operation mode's functions, the sensors in the return and supply lines are assigned.

The filling can be defined as water, Tyfocor, propylene glycol or ethylene glycol.

Continue to scroll.

1.2 Settings 

Date/Time ►

Language ►

Display ►

Temp. limitation ►


Max.temp.shutoff ►▼

04.07.2012 10:33

The following items appear under >1.2.

Settings< next to the operation mode menus:

- >Temp. limitation<
- >Max.temp.shutoff<

1.2 Settings 

Max.temp.shutoff ►▲

Min. temperature ►

Priority charging ►

Rem.SD card safely

Factory settings

04.07.2012 10:33

After scrolling:

- >Min. temperature<
- >Priority charging<

Call up menu item >Temp. limitation<.

If the temperature in tank 1 exceeds the value T limit 1, or if the temperature in tank 2 exceeds the value T limit 2, the solar circuit pump is switched off unconditionally.

The pump is not switched on again until the actual temperature falls below the value T limit by the hysteresis >Hyst<.

Example: T limit =60°C minus Hyst=5K
=> Reclosing temperature 55°C.

Continue via the menu item >Max.temp.shutoff<.

Maximum temperature of the tanks 1 and 2, to avoid excessively hot water in the tank; the tank in question is only charged to its >T max<.

In case of collector overheating, the tank can be charged up to >T-limit<.

Continue via the menu item >Min. temperature<.

To increase efficiency on charging the tanks, the minimum temperature to be present at the collector in question is entered via >T min. Coll<.

The relevant hysteresis value represents the difference between the switch-ON and switch-OFF temperature.

Continue via the menu item >Priority charge<.

1.2.3 Temp.limitation



Hyst 5.0K

T limit 1 60.0°C

T limit 2 60.0°C

If T-limit>60°, anti-scalding protection must be installed.

04.07.2012

10:34

1.2.5 Max.temp.sh...



T max.tank 1 59.0°C

T max.tank 2 59.0°C

04.07.2012

10:34

1.2.6 Min.temperat...



Activation ☒

T min.Coll 1 20.0°C

Hyst.Coll. 1 2.0K

04.07.2012

10:34

1.2.8 Priority charg...



Priority	Tank 1
t pause	2min
t charge	20min
dT Coll.	2.0K

04.07.2012

10:34

In case of dual-tank systems, the tank to be charged first is defined: tank 1, tank 2 or parallel charging.

>t pause< is used to set the pause time between twot switch-ON tests.

>t charge< serves to define the charging time for the secondary tank.

Once >dT Coll< is reached, the pause time is restarted.

Continue with >Basic functions<.

1.3 Basic functions



Thermostat	▶
Output parameter	▶
Tube collector	▶
Holiday function	▶
Collector cooling	▶▼

04.07.2012

10:35

The following items appear under >1.3. Basic functions< next to the operation mode menus:

- >Thermostat<
- >Output parameter<
- >Collector cooling<
- >Post Heating Requ. ...

1.3 Basic functions



Commissioning	▶▲
Delta T control	▶
Fixed T control	▶
Increase return T	▶
Post Heating Requ.	▶

04.07.2012


10:35

... and enhanced menus regarding the


- >Holiday function<
- >Delta T control<
- >Fixed T control<
- >Increase return T<

Call up the menu item >Thermostat<.


If outputs on the controller are not assigned, these channels can be used as thermostats.
Here, the appropriate channel is selected.

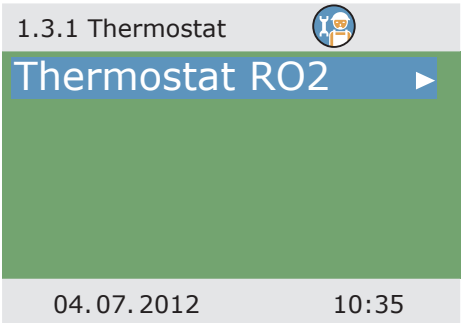


Aktivierung vornehmen.
As start signal, the timer, timer-thermostat or temperature-thermostat thereof can be set.
The output has already been defined by the selection - the related sensor remains to be defined.
Continue to scroll..

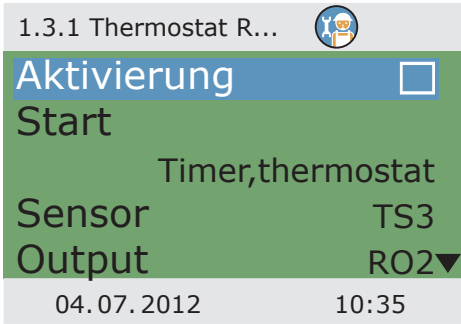


Define switch-ON/OFF temperature.
For the heating function,
T ON must be < T OFF.
For the cooling function,
T ON must be > T OFF.
Up to four time slots can be assigned to each thermostat function.
First of all, define the switch-ON times.
Continue to scroll.

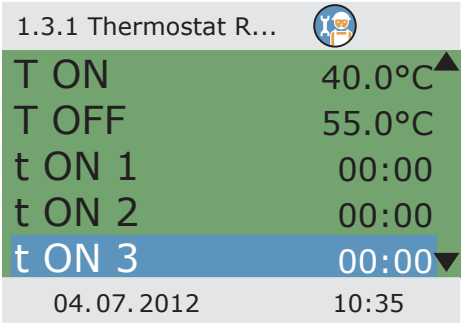


1.3.1 Thermostat R...		
t ON 4	00:00	▲
t OFF 1	00:00	
t OFF 2	00:00	
t OFF 3	00:00	
t OFF 4	00:00	
04.07.2012		10:35

Then, define the switch-OFF times.
Continue via the menu item
>Output parameter<.

1.3.7 Output para...		
Solar pump 1		▶
Solar pump 2		▶
Boiler		▶
t tear-off	10s	
n tear-off	100%	▼
04.07.2012		10:35

Here, the general settings for the
assigned outputs are defined.
Continue to scroll.


1.3.7 Output para...		
Solar pump 2		▶▲
Boiler		▶
t tear-off	10s	
n tear-off	100%	
Speed delta	10%	
04.07.2012		10:35

>t tear-off< and >n tear-off< define
how long and at which speed the
pumps are to run on starting.
Select an output...

...to define the required control algorithm as >dT< or >Fixed T<.

In case of plants with long piping or slow response, overtravel times for the solar circuit, pump and valve can be determined.

Continue to menu item >Tube collector<.

1.3.7 Output para... 

Algorithm dT

Overtravel time 0s

n min. 50%


n max. 100%

04.07.2012 10:35

To receive correct measured values from the tube collector system, the pump must be switched ON briefly.

By activation of the function, the solar circuit pump can be started time- and/or temperature-controlled.

The time sequence, the pump ON time and ...

1.3.2 Tube collector 

Activation ☐

Start time-dependent

t-ON 10min

T ON 20.0°C


t solar 1 20s▼

04.07.2012 10:35

... the pump delivery rate as a percentage value can be entered.

The two time programs are performed one after the other.

Continue via the menu item >Holiday function<.

1.3.2 Tube collector 

n solar 1 100%▲


t solar 2 0s

n solar 2 30%

t start 06:00

t end 20:00

04.07.2012 10:35

1.3.3 Holiday function 

Start 19.07.2012


End 02.08.2012

04.07.2012 10:35

To avoid overheating of the plant, the controller will suppress yield optimization while the holiday function is activated.

The time frame of the holiday function is mostly defined in operation mode.

Continue to scroll.

1.3.3 Holiday function 

Tank cooling ☐

Start 00:00

End 07:00


Re-cooling T min. tank

04.07.2012 10:35

If tank cooling is activated, an appropriate time frame must be defined - this makes sense during the cooler hours of the night - by allowing the controller to dissipate as much energy as possible via the collectors.

Under >Recooling<, determine whether cooling is to be effected down to >T min tank< or >T max tank<.

Continue to scroll.

1.3.3 Holiday function 

n pump 100%

Hyst. 5.0K

Soft charge ☐

dT 5.0K

T min tank 1 45.0°C

04.07.2012 10:35

Under >n pump< set the pump speed in percent.

Enter the hysteresis value by >Hyst<.

If necessary, activate >Soft charging<

>dT< is used to define the switch-ON temperature for the holiday function as a difference from the preset maximum temperature of the tank.


Via >T-min tank 1< and ...

Continue to scroll.

...>T-min tank 2<, specify the minimum temperature required for the tank in question.

Select whether the >Priority tank< or the >Secondary tank< are to be cooled.

Continue via the menu item >Collector cooling<.

1.3.3 Holiday function 

dT 5.0K▲

T min.tank1 45.0°C

T min.tank2 45.0°C

Tank


Priority tank

04.07.2012 10:35

Here, collector cooling is activated: once the collector temperature >T max. Coll. 1<, or >T max. Coll. 2< is reached, the appropriate solar circuit pump continues to operate until the tank limit temperature is reached.

Return to >1.3. Basic functions<.

Continue with >Commissioning<.

1.3.4 Cooling funct. 

Activation ☐


T max.Coll.1 121.0°C

04.07.2012 10:36

Here, new commissioning can be started - e. g. if a new hydraulic system is to be selected.

=> >Commissioning mode< as of page 43.

Continue with >Delta T control<.

0 Welcome 

You really want to start commission.?

No Yes

04.07.2012 10:36

1.3.5 dT control



Activation dT 1	<input type="checkbox"/>
Activation dT 2	<input type="checkbox"/>
dT 1	2.0k
dT ON 1	8.0K
dT OFF 1	4.0K▼

04.07.2012

10:37

If control algorithms have been defined as >dT< under >1.3.7 Output parameter<, the appropriate outputs can be configured here.

Via >dT ON<, the switch-ON temperature, via >dT OFF<, the switch-OFF temperature and via >dT targ.<, the target differential temperature are set. (Differential temperature between collector and tank, bottom).

Continue with >Fixed T control<.

1.3.6 Fixed temp.c...



Control 1	<input type="checkbox"/>
Variant 1	
	step-wise
T fixed 1	70.0°C

04.07.2012

10:37

If control algorithms have been defined as >Fixed T< under >1.3.7 Output parameter<, the appropriate outputs can be configured here.

In case of the fixed temperature control, the collector is controlled to the preset temperature via a variable pump delivery rate.

Continue with >Efficiency functions<.

1.3.10 Post Heatin...



Activation	<input type="checkbox"/>
Boiler type	
	Solid fuel boiler
Hysteresis	10.0K
Min. temp.	40.0°C▼

04.07.2012

10:37


Here, reheating can be activated.

The boiler is defined as >Solid-fuel boiler< or >Gas/oil<.

In case of solid-fuel boilers reheating is made via the charge pump of the drinking water tank and is only activated if the temperature of the tank is within the values >Min. temp.< und >Max. temp.<.

Up to six time blocks can be activated for reheating.

1.3.10 Post Heatin...



Max. temp.

55.0°C

▲

Time block 1

▶

Time block 2

▶

Time block 3

▶

Time block 4

▶▼


04.07.2012

10:37

>Ref. temp.< is used to define the set temperature at the top tank sensor.

If the temperature falls below >Ref. temp.< by >Hysteresis<, the control activates the reheating cycle via the heating boiler until >Ref. temp.< is reached.

1.3.10 Post Heatin...



Activation

☐

Ref. temp.

45.0°C

Starting time

00:00

End time

23:59


04.07.2012

10:37

Each period can be defined with >Weekends<, Monday - Sunday< or >Monday - Friday<.

Continue with >Efficiency functions<.

1.3.10 Post Heatin...



Ref. temp.

45.0°C

▲

Starting time

00:00

End time

23:59

Time period

Weekends

04.07.2012

10:37

1.4 Efficiency funct...



Low-Flow ▶
 Quick-charging ▶
 Disable recharge ▶

The following items appear under
 >1.4. Efficiency funct.< next to
 the operation mode menus:

- >Low-Flow<
- >Quick-charging<

Call up menu item >Low-Flow<.

04.07.2012

10:38

1.4.1 Low-Flow



Activation ☐
 T ON 60.0°C

Here, the switch-ON temperature
 can be defined for low-flow plants.

Continue with >Quick-charging<.

04.07.2012

10:38

1.4.2 Quick-charging



Activation ☐
 Sensors TS3
 T ON 48.0°C
 T OFF 52.0°C
 T targ.Coll. 70.0°C

Tank quick charging changes over from
 dT control to fixed temperature control.

>T ON< and >T OFF< define the
 change-over range and >T targ. Coll.<
 the fixed temperature on the collector.

An upper tank sensor is
 required for quick-charging.

Continue with >Disable recharge<.

04.07.2012

10:38

If the plant has been designed accordingly and a system involving disable recharge selected, the appropriate parameters are set here.


Here, the time control and/or the temperature control are activated - possible for all systems with heating boiler control.

Time and temperature control can be used in combination.

Select the time slot via >Start< and >End<.

Select the minimum temperature via >T min tank<.

Continue to scroll.

1.4.3 disable recha... 

Activ.time progr. ☐

Start 00:00

End 00:00

Activation T min. ☐

04.07.2012 10:39


Here, the efficiency-optimized disable recharge is enabled and activated - possible for all systems 2, 6, 8, 11, 13, 15.

Set >factor 1<.

Factor 1 weights the expected solar input, factor 2 the absolute level.

By reducing factor 1, the expected solar input gets a higher weighting.

Continue to scroll.

1.4.3 disable rech... 

T min.tank 45.0°C

Activat.Tmin Float ☐

Factor 1 4.0

04.07.2012 10:39

Set >factor 2<.

By reducing factor 2, reaching the tank minimum temperature >T min tank< (at the end of the menu) gets a higher weighting.

Determine under >T floating< whether the temperature is to be measured on the upper or lower tank sensor.

Enter the minimum tank temperature via >T min tank<.

Return to >Main menu<.

Continue with >Protective funct.<.

1.4.3 disable recha... 

Factor 2 2.0

T targ. 45.0°C

T floating upper tank sensor

T min.tank 45.0°C

04.07.2012 10:39

1.5 Protective funct. 

Anti-blocking	▶
Collector defrost.	▶
Anti-legionellae	▶
Antifreeze protect.	▶
Tank cooling	▶▼


04.07.2012 10:40

The following items appear under
>1.5. Protective funct.< next
to the operation mode menus:

- >Anti-Blocking<

- >Antifreeze protection<

Call up menu item >Anti-Blocking<.

1.5.1 Anti-block pr... 

Start	11:00
Duration	5s

04.07.2012 10:40

The pumps can be moved daily to
prevent them from getting blocked.

This function is not activated as long as
the pumps are activated in normal operation.

Determine the time of the
day and the operating period.

Continue with >Collector defrost.<.

1.5.2 Defrosting 

Activation	<input type="checkbox"/>
t defrosting	5min

04.07.2012 10:41

>Defrosting< can be used
to heat frozen collectors.

At the same time, the tank is cooled!

Set the pump runtime.

Continue with >Antifreeze protect.<.

Activation and setting of the anti-freeze protective function for the collector.

Via >T ON<, enter the anti-freeze protection temperature for water-filled plants.

When anti-freeze products are used, the type and the proportion can be entered; the anti-freeze protection temperature is calculated automatically.

Continue to scroll.


1.5.3 Antifreeze pr... 

Activation	<input type="checkbox"/>
T ref	5.0°C
T ON	5.0°C
Glycol type	Water▼

04.07.2012 10:42

In the case of plants with two tanks, the source of the anti-freeze protection heat must be selected by specifying >Priority tank< or >Secondary tank<.

Continue with >Anti-legionellae<.

1.5.3 Antifreeze pr... 

T ON	5.0°C▲
Glycol type	Water
Tank	Priority tank

04.07.2012 10:42

These parameters must be set by the fitter based on the applicable national regulations. >Function< is used to define the period in days (1day - 7days) during which legionella reduction must have occurred at least once.

>t-ON< is used to define the time of a possibly required reheating cycle.

>T legionellae< defines the disinfection temperature. >t monitor<< is used to define the minimum disinfection time.

Continue with >Tank cooling<.

1.5.4 Anti-legionellae 

Repetition	1 day
T legionellae	60.0°C
t-ON	01:00
t-monitor	60min
Activation	<input type="checkbox"/>

04.07.2012 10:43

1.5.5 Cooling funct.



Activation	<input type="checkbox"/>
Hyst.tank 1	2.0K
Hyst.tank 2	2.0K
t-ON	00:00
t OFF	07:00▼

04.07.2012

10:43

Here, the parameters for tank cooling are defined.

>t-ON< and >t-OFF< are used to define the appropriate time slot in which the tank is to be cooled via the collector, and >Hyst.tank 1< and >Hyst.tank 2< are used to define the switch-ON hysteresis.

Continue to scroll.

1.5.5 Cooling funct.



Hyst.tank 1	2.0K▲
Hyst.tank 2	2.0K
t-ON	00:00
t OFF	07:00

Adjusting balance ☐

04.07.2012

10:43

If the adjusting balance is activated, the heat dissipated via the collector is deducted from the energy balance calculation.

Continue with >Soft charge<.

1.5.6 Soft charge



Activation	<input type="checkbox"/>
T min. tank1	45.0°C
T min. tank2	45.0°C
Start	30.05.
End	31.07.

04.07.2012

10:43

Soft charging sets the plant to protection mode to prevent excessively high tank temperatures.

The start temperatures for two tank circuits and the appropriate calendar period are determined here.


Return to >Main menu<.

Continue with >Monitoring<.

The following items appear under >1.6. Monitoring< next to the operation mode menus:

- >DiffTemp<
- >Coll.Emerg.OFF<
- >Sensor balancing<

Call up the menu item >DiffTemp<.

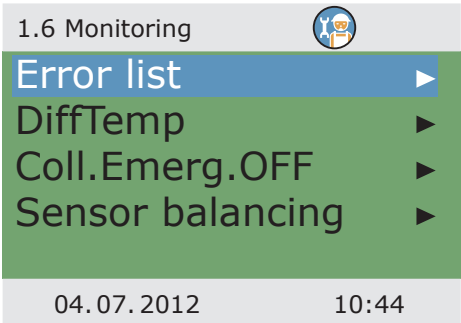


>dT monitoring< is used to define the criteria which lead to fault detection.

>dT coll/stor< is used to define a differential temperature between collector and tank, and >t max.coll/tank< for the relevant period of time.

If >dT coll/stor< is exceeded within >t max.coll/tank<, the controller detects a fault.

Continue to scroll.

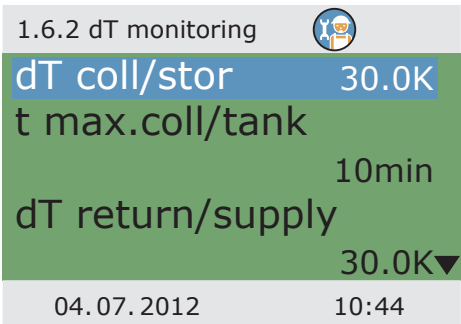



The second fault criterion is defined as follows:

>dT return/supply< is used to define a differential temperature between the return and supply flow, >t max return/supply<, the appropriate period of time.

If >dT return/supply< is exceeded within >t max return/supply<, the controller detects a fault.

Continue with >Coll. Emerg.OFF<.

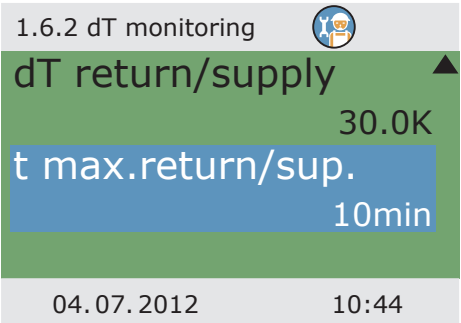

1.6.4 Emerg. OFF 


T limit Coll.1 130.0°C
Hyst. 5.0K

04.07.2012 10:45

>T limit Coll. 1< or >T limit Coll. 2< are used to switch OFF the appropriate solar circuit pumps to prevent destruction.

Under >Hyst<, the value is entered by which the limit temperature must be undercut to cancel the forced shut-off.

Continue with >Sensor balancing<.

1.6.5 Sensor balan... 

TS1 Offset 0.0°C
TS2 Offset 0.0°C
TS3 Offset 0.0°C
TS4 Offset 0.0°C

04.07.2012 10:46


Long piping and other factors may distort measured variables.

Here, an offset value can be entered for each sensor.

If the professional mode is not exited actively, the controller automatically displays the plant layout after the preset display shut-off time and the value of the access code is reset to 1.

Return to >Main menu<.

Continue with >Login<.

1.7 Login 

Access code 365
Manual mode ▶
Firmwareupdate USB



04.07.2012 10:47

Continue with >Manual mode<.

In manual mode, the individual outputs can be activated for testing purposes, e. g. to check that a pump is working properly.

Manual mode can only be exited by pressing ESC.

1.7.1 Manual mode



Solar pump 1	<input type="checkbox"/>
Solar pump 1	100%
Solar pump 1	

Solar pump 2	<input type="checkbox"/>

04.07.2012

10:48



Danger!

Mortal danger due to electrocution!
Before opening the terminal cover,
disconnect all poles of the power supply reliably!



For disassembly of the differential temperature controller **Energy Pro**, reverse assembly procedure:

- Disconnect the power supply.
- Open the terminal cover.
- Disconnect all cables.
- Release the wall screw fastening.
- Remove the controller from its mounting location.



Danger!

Mortal danger due to electrocution!
When removing the controller, secure all stripped
cable ends so that they cannot be touched by persons!
Remove cables completely on definite removal.



Important!

The person who or the institute which is responsible for disposal of the device must not discard the controller with the residual waste, but must ensure correct recycling in accordance with the local provisions!

In case of doubt, ask the local disposal company or the authorized dealer from which you have purchased the device.



Warranty and liability

The differential temperature controller **Energy Pro** was developed, manufactured and tested according to stringent quality and safety specifications and corresponds to the state of the art.

The device is subject to the warranty period prescribed by law of 2 years after the date of sale.

The seller shall eliminate all defects in material and workmanship which occur on the product during the warranty period and which impair the product's functionality.

Natural wear and tear does not constitute a defect.

Warranty and liability does not include all damage which is due to one or several of the following reasons:

- Non-compliance with these Assembly and Operating Instructions.
- Inappropriate transport.
- Faulty assembly, commissioning, maintenance or operation.
- Modifications of the structure or tampering with the software of the device.
- Installation of supplementary components which are not approved by the manufacturer.
- Continued use of the controller despite an obvious defect.
- Use of non-approved spare parts and accessories.
- Applications exceeding the intended scope of utilization.
- Inappropriate utilization of the device / improper handling, e. g. ESD.
- Use of the device outside of the admissible technical boundaries.
- Voltage surges, e. g. due to lightning strokes.
- Force majeure.

Further claims based on this warranty obligation, especially compensation for damage exceeding the asset value of the differential temperature controller, are excluded.

Construction, design and project engineering of heating installations are performed by specialist fitters based on the applicable standards and directives.

The functioning and safety of a plant are the exclusive responsibility of the companies commissioned with planning and execution.

Contents and illustrations of this manual have been elaborated to the best of our knowledge and with utmost diligence - we reserve the right of error and technical modifications.

Liability of the manufacturer for inappropriate, incomplete or incorrect information and all damage resulting therefrom is excluded on principle.

Error pattern/error description:

Error message:

Software version:

Service Wizard executed: ☐ Yes ☐ No

Screens: TS1:

TS2:

TS3:

TS4:

Wiring: RO1: ☐ Pump ☐ HE ☐ Valve

RO2: ☐ Pump ☐ HE ☐ Valve

REL: ☐ Yes ☐ No

Service hours: RO1:

RO2:

REL:

Equipment/Accessories/Options:

Important!

For repair or replacement of the controller, make sure that completed copies of the commissioning report and of the error report are included!



Commissioning report

Name of operator and place of installation:

Date of commissioning:

Installed hydraulic system:

Collector surface, in total [m²]:

Tank sizes [l]:

Anti-freeze agent Type/concentration:

Particularities:

The solar thermal plant with the differential temperature controller **Energy Pro** has been installed and commissioned in an expert fashion.

The owner / operator of the plant was informed in detail and instructed as regards the design, operation, handling, especially in connection with the differential temperature controller **Energy Pro**.

Commissioning by the company (name/address/telephone number):

Name of employee:

The manufacturer

Meibes System-Technik GmbH
Ringstraße 18
D - 04827 Gerichshain

declares in its sole responsibility that the following product:

Differential temperature controller ›**Energy Pro**‹

to which this Declaration refers, complies with the following directives and standards:

Directive 2006/95/EC of the European Parliament and the Council dated 12 December 2006 on the harmonization of the laws of the Member States relating to electrical equipment designed for use within certain voltage limits.

Directive 2004/108/EC of the European Parliament and the Council dated 15 December 2004 on harmonization of the laws of the Member States relating to electro-magnetic compatibility and abolition of the Directive 89/336/EEC.

Directive 2001/95/EC of the European Parliament and of the Council dated 3 December 2001 regarding general product safety.

Technical regulations, Low-Voltage Directive:

EN 60730-1:2000

Technical Report no. S34163-00-00TJ, S34163-00-01TJ*

Test institute/Laboratory: mikes-testingpartner GmbH, Strasskirchen

Technical regulations, EMC Directive:

EN 60730-1:2000 + A1:2004 + A12:2003 + A13:2004 + A14:2005 (EMC part)

EN 55022:1998 + Corr. 1999 (Class B)

EN 61000-3-2:1995 + corr. July 1997 + A1: 1998 + A2:1998 + A14:2000

EN 61000-3-3:1995 + A1:2001 + A2:2005

Test Report no. E34488-00-00HP*

Test institute/Laboratory: mikes-testingpartner GmbH, Strasskirchen

*The original test reports are available at manufacturer.

D - 04827 Gerichshain, 24.08.2012,

Signed

Robert Sagstetter
Managing Director

Index

A			
Active system	12	Malfunction	63 ff.
Antifreeze	84	Manual mode	88
Anti-blocking	83		
Anti-legionella function	41/84	O	
Automatic mode	48	Operation of the controller	11
		Output parameter	75 f.
B			
Break-out segments	10/15	P	
Brightness	54	Priority charge	73
		Professional mode	69 ff.
C		Protective functions	83
Cable cross sections	8	PWM control signal	17
Cable diameter	16		
Cleaning	6	Q	
Collector cooling	78	Quick-charging	81
Commissioning mode	43		
Connection	15 ff.	R	
Connection diagram, switching valve	16	Reheat function	41/79 f.
		Rotary encoder	11
D			
Data interfaces	19	S	
Date/Time	53	Scope of Supplies	8
Defrosting	83	Sensor balancing	87
Description	6	Sensor line	6
Differential temperature	17	Service wizard	63 ff.
Disable recharge	41/82	Soft charge	60/85
Disposal	89	Software version	61
		Solar yield	17
E		Strain relief device	10/15
Emergency OFF	87	Switching valve	16
Error list	52/60		
Evaluation	50 ff./70	T	
		Tank cooling	60
F		Temperature sensor	6
Functions for boiler control	41	Tube collector	56/76
G		V	
Guided diagnostic process	62 ff.	Volumetric flow sensor	17
		Vortex sensor	17
H			
High-efficiency pump	17	W	
Holiday function	47/56/77	Wall-mounting	14
Hydraulic systems	21 ff.		
I			
Impeller	17		
Intended Use	8		
L			
Legend to symbols	20		
Login	61/69		
Low-Flow plant	81		

Meibes System-Technik GmbH
Ringstraße 18
D - 04827 Gerichshain
Deutschland

Telephone + 49 - (0) 34 29 2 - 7 13 - 0
Telefax + 49 - (0) 34 29 2 - 7 13 - 50
info@meibes.de

www.meibes.de

